



SMART HOME INTELLIGENT TOUCH SWITCH


USER MANUAL GUIDE

Caution

1. Always switch off the main electric supply during installation.
2. Connect wires as shown on the wiring diagram.
3. Please ensure the load power is within our load power range
4. If you test the switch by touching the pad directly (without panel), take power off for min. 10mins after test, then put on the panel and use.



Dimensional Drawing

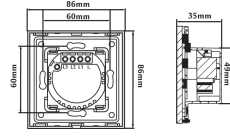


Specification

Size(single): 72mm*118mm*34.6mm
 Rated Voltage: 110-240VAC
 Rated Power: 1way/2way/remote/curtain-3-800w/wang, 2000w total
 1way dimmer: 3-700w/gang, 700W total
 2way dimmer: 3-200w/gang, 200W total
 Energy Consumption: dimmer switch 0.5W, non-dimmer switch 0.02w
 Working Temperature: -20°C~+70°C
 Capability Allowance: -5%~+10%
 Relative Humidity(non-condensing): 10%~93%
 Mechanical Life: 100,000 on-off times




1Way Switch Wiring Diagram

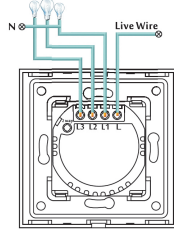


2Way Switch Wiring Diagram

Option1, work as 2way, one switch with lamp

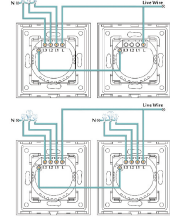

2Way Switch Wiring Diagram


Option3, work as 3way, switches with lamp or not as want

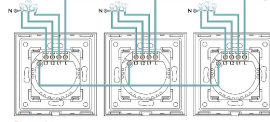

Remarks:

1. Switch can recognize whether power is loaded or not auto matically. Switch will be switched off(not work) if no load or load not workable. If touch the circle area, no reaction.
2. Each 2 way switch can share memory with a synchronized 2 way switch. 2 way switches will work as pair after synchronizing. 2 way switch can work as 1 way switch if not synchronizing

Remote Curtain Switch Wiring Diagram

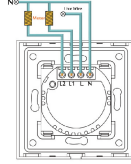

Applicable Lamps

Dimmer switch: Incandescent lamp, dimmable Led Lamp(3W min.)
 Non-dimmer switch: Incandescent lamp, energy saving lamp(3W min.), Led Lamp(3W min.), fluorescent lamp(both magnetic and electronic ballast)
 If lamp flicker (usually for lamps less than 3w or poor quality LED), please use our led adapter or capacitor. The led adapter made from ceramics and resistant to fire.

CE RoHS



12 years quality maintenance.

After Sale Service



Wiring of the Led Adapter

When dimmer remote switch is off, touch the desired gang central circle and hold on for 3 seconds (light still off) until the backlight flash, then release your finger. Touch and hold on again for 5 seconds, then the backlight will stop flashing and become constant blue. Cancelling succeeds.

When dimmer remote switch is on, touch the desired gang central circle and hold on for 3 seconds (light still on) until the backlight flash, then release your finger. Touch and hold on again for 5 seconds, then the backlight will stop flashing and become constant blue. Cancelling succeeds.

When dimmer remote switch is off, touch the desired gang central circle and hold on for 3 seconds (light still off) until the backlight flash, then release your finger. Touch and hold on again for 5 seconds, then the backlight will stop flashing and become constant blue. Cancelling succeeds.

Step1: When dimmer remote switch is off, touch the desired gang central circle and hold on for 3 seconds (light still off) until the backlight flash, then release your finger. Now switch is in matching mode and ready for programming.

Step2: If use the small buttons controller, press the C button and finish synchronizing. A (dim down) and B (dim up) buttons will be paired automatically.

Step3: If use the Tabutons controller, press any Dim button (Dim 1, Dim 2 or Dim3) and finish Synchronizing. Button "+" is for dim up, Button "-" is for dim down. Dim1-3 is for on and off.

Canceling Synchronizing

When dimmer remote switch is off, touch the desired gang central circle and hold on for 3 seconds (light still off) until the backlight flash, then release your finger. Touch and hold on again for 5 seconds, then the backlight will stop flashing and become constant blue. Cancelling succeeds.

When dimmer 2 way switch is then release off, touch the desired gang central circle and hold on for 3 seconds (light still on) until the backlight flash, then release your finger. Touch and hold on again for 5 seconds, then the backlight will stop flashing and become constant blue. Cancelling succeeds.

When dimmer 2 way switch is then release off, touch the desired gang central circle and hold on for 3 seconds (light still on) until the backlight flash, then release your finger. Touch and hold on again for 5 seconds, then the backlight will stop flashing and become constant blue. Cancelling succeeds.

Step1: When dimmer 2way switch is off, touch the desired gang central circle and hold on for 4seconds min. (light still off). The backlight will flash, and then release your finger. Now switch is in matching mode and ready for programming (please finish programming in 10seconds).

Step2: Touch the desired gang central circle (at the corresponding position as Step1 switch) on the other way dimmer switch, the flashing and become constant blue. Cancelling succeeds.

Step3: Touch the desired gang central circle (at the corresponding position as Step1 switch) on the other way dimmer switch, the flashing and become constant blue. Cancelling succeeds.

Canceling Synchronizing

When dimmer 2 way switch is then release off, touch the desired gang central circle and hold on for 3 seconds (light still on) until the backlight flash, then release your finger. Touch and hold on again for 5 seconds, then the backlight will stop flashing and become constant blue. Cancelling succeeds.

When dimmer 2 way switch is then release off, touch the desired gang central circle and hold on for 3 seconds (light still on) until the backlight flash, then release your finger. Touch and hold on again for 5 seconds, then the backlight will stop flashing and become constant blue. Cancelling succeeds.

When dimmer 2 way switch is then release off, touch the desired gang central circle and hold on for 3 seconds (light still on) until the backlight flash, then release your finger. Touch and hold on again for 5 seconds, then the backlight will stop flashing and become constant blue. Cancelling succeeds.

Step1: Touch the desired gang central circle (light on) and hold on for 4seconds. The backlight will flash, then release your finger. Now switch is in matching mode and ready for programming.

Step2: Touch the desired gang central circle (light on) and hold on for 4seconds. The backlight will flash, then release your finger. Now switch is in matching mode and ready for programming.

Step3: Touch the desired gang central circle (light on) and hold on for 4seconds. The backlight will flash, then release your finger. Now switch is in matching mode and ready for programming.

When dimmer 2 way switch is then release off, touch the desired gang central circle and hold on for 3 seconds (light still on) until the backlight flash, then release your finger. Touch and hold on again for 5 seconds, then the backlight will stop flashing and become constant blue. Cancelling succeeds.

When dimmer 2 way switch is then release off, touch the desired gang central circle and hold on for 3 seconds (light still on) until the backlight flash, then release your finger. Touch and hold on again for 5 seconds, then the backlight will stop flashing and become constant blue. Cancelling succeeds.

Step1: Touch the desired gang central circle (light on) and hold on for 4seconds. The backlight will flash, then release your finger. Now switch is in matching mode and ready for programming.

Step2: Touch the desired gang central circle (light on) and hold on for 4seconds. The backlight will flash, then release your finger. Now switch is in matching mode and ready for programming.

Step3: Touch the desired gang central circle (light on) and hold on for 4seconds. The backlight will flash, then release your finger. Now switch is in matching mode and ready for programming.

When dimmer 2 way switch is then release off, touch the desired gang central circle and hold on for 3 seconds (light still on) until the backlight flash, then release your finger. Touch and hold on again for 5 seconds, then the backlight will stop flashing and become constant blue. Cancelling succeeds.

When dimmer 2 way switch is then release off, touch the desired gang central circle and hold on for 3 seconds (light still on) until the backlight flash, then release your finger. Touch and hold on again for 5 seconds, then the backlight will stop flashing and become constant blue. Cancelling succeeds.

Step1: Touch the desired gang central circle (light on) and hold on for 4seconds. The backlight will flash, then release your finger. Now switch is in matching mode and ready for programming.

Step2: Touch the desired gang central circle (light on) and hold on for 4seconds. The backlight will flash, then release your finger. Now switch is in matching mode and ready for programming.

Step3: Touch the desired gang central circle (light on) and hold on for 4seconds. The backlight will flash, then release your finger. Now switch is in matching mode and ready for programming.

When dimmer 2 way switch is then release off, touch the desired gang central circle and hold on for 3 seconds (light still on) until the backlight flash, then release your finger. Touch and hold on again for 5 seconds, then the backlight will stop flashing and become constant blue. Cancelling succeeds.

When dimmer 2 way switch is then release off, touch the desired gang central circle and hold on for 3 seconds (light still on) until the backlight flash, then release your finger. Touch and hold on again for 5 seconds, then the backlight will stop flashing and become constant blue. Cancelling succeeds.

Step1: Touch the desired gang central circle (light on) and hold on for 4seconds. The backlight will flash, then release your finger. Now switch is in matching mode and ready for programming.

Step2: Touch the desired gang central circle (light on) and hold on for 4seconds. The backlight will flash, then release your finger. Now switch is in matching mode and ready for programming.

Step3: Touch the desired gang central circle (light on) and hold on for 4seconds. The backlight will flash, then release your finger. Now switch is in matching mode and ready for programming.

1. Non-dimmer Switch



Touch the circle area, light on (back light blue)

Touch and hold the circle area to dim up. Release and hold again to dim down (light off)

Dimmer switch has memory function. Light is 60% will remember area and release quickly, work as on or off.

Touch and hold the circle area to dim up. Release and hold again to dim down (light off)

3. Curtain Switch



Touch the circle area, light on (back light blue)

Touch and hold the circle area to dim up. Release and hold again to dim down (light off)

Dimmer switch has memory function. Light is 60% will remember area and release quickly, work as on or off.

Touch and hold the circle area to dim up. Release and hold again to dim down (light off)

Installation Diagram

