

Heater User Manual

Dear Customer,

Thank you for the confidence you placed in products. Our goal is to ensure that you use this product, which has been manufactured in our modern facilities in precise working conditions, conforming to total quality idea and without harming nature.

We recommend that you read and carefully store the User Manual before you use your heater, so that it can preserve its features for a long time and serve you most efficiently.

<u>NOTE:</u> This User Manual is prepared for more than one model. Some of the features stated in the manual may not be found in your device. These features are denoted with *

Our products are for domestical use, not for commercial use.



"READ THE INSTRUCTIONS BEFORE DEPLOYING OR USING THIS DEVICE."



This product is manufactured in environment-friendly modern facilities without harming the nature

"It complies with EEE Regulation."

Contents

Contents	1/
Safety Instructions	18
Technical features	21
Stand assembly	22
Technical Features and Using your heater	23
Maintenance and Cleaning	24
Troubleshooting	24
Compliance with WEEE regulation and disposal of waste	
product Packaging information	25

Safety Instructions

This device is manufactured in compliance with safety regulations. Usage against the roles causes harm to person and device.

Please read the User Manual carefully before operating the device. You will find important informations inside the User Manual regarding mounting, safety, usage and maintenance. Thus you will both protect yourself and prevent the device from coming to harm.

If the power cord is damaged, it must be replaced by the manufacturer or its service agency or a personnel qualified in the same degree to prevent a dangerous situation. It must be checked whether there are breaks or deformations on the heating element present on the device. If glass panels are damaged, the heater must not be used. Authorized service must be called.

It must be ensured that the main power is $220-240V \sim$, 50/ 60 Hz and the power line is connected to the fuse. Mains safety must be checked. Fuse must be 16 Amperes. Your device must be used with grounded socket and grounded socket must be outside the heater area and the hot surface. Also, it must be checked whether the socket is loose or damaged. Because loose sockets damage the device and the power main.

Your device must not be used connected to the same power cable or fuse with another device.

Power cord must not be left on the hot body of the device or near it.

If your device will not be used for a long period of time, if cleaning or maintenance will be conducted, the device must be unplugged. It must be ensured that the device has cooled down.

Do not operate your device right near bathroom, shower or swimming pool.

The device is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities or lack of experience and knowledge, unless they have benn given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

The electrical connection of the device must be separated from the mains during mounting and maintenance or repair works. Device must be unplugged to be separated from the mains.

Safety Instructions

Definitely do not let your device come into contact with water.

Ensure that the feed cable and the plug is clean and dust-free prior to use.

Never unplug the feed cable from the plug by tugging on the cable. Ensure that you hold the plug correctly as you plug it into or take it out of the socket. Do not touch the feed cable with wet hands.

Do not make a joint to the feed cable. Otherwise, malfunction, electric shock or fire risk may occur.

Do not pass the feed cable under heavy objects. Otherwise, electric shock or fire risk may occur.

Do not turn off your heater only by unplugging it or shutting down the fuse, always turn off by using the heater tube function button.

Do not operate your device without putting water into its humidifier. The water in the humidifier depletes after an operation of approximately 10 hours. Please add water.

In case of too much water adding, water comes out of the discharge point of the water level gauge, adding must be conducted while observing the water level.

Fire risk exists if the heater is covered by or positioned close to curtains or other combustible materials.

The flame protector of this heater is for preventing direct access to heater elements and must be in place while the heater is in use.

Do not use your device outside its intended purpose.(Do not use it for drying clothes or keeping animals or plants warm.)

Never try to clean the device with solvents or flammable liquids.(It may cause electric shock or fire)

Do not operate the device while sleeping or while away from where the device is located.

The device must be on a level and smooth surface during use. Do not operate your device on unstable or unsafe surfaces.

Safety Instructions

Refrain from using extending cord, it might cause fire due to overheating. If you have to use an extending cord, the cable cross section must be at least 2 mm² (14AWG).

Do not try to disassemble or repair the heater. Never shake the heater.

A faint smoke and smell might form during the first use of your device. This is normal. Do not touch the device while running or right after operation.

Device must be unplugged before cleaning. Do not clean your device with vapor cleaners.

Children should be supervised to ensure that they do not play with the appliance.. Flame protector does not provide a full protection for small children and handicapped people.

Heater is not operated by a Programmer timer or any other system which manage the heater automatically. Store your device in dry and enclosed locations.

Device must only be used in horizontal position (on its stand).

Minimum 0,75 meter distance must be present between the device and the ceiling.

Min. 1 meter distance must be between the device and the floor for wall mounting.

Min. 1 meter distance must be between the device and curtains, wood, cardboard fabric etc. Materials, living things and other devices.

Fingers or other object must not be protruded into the protective cage wire.

The heater must not be located in front of a socket-outlet.

Do not move the device while running. Always shut off the device before touching and wait for it to cool down.

Do not cover your heater in order to prevent excessive heating. Do not close the ventilation ducts and the wire part.

Do not operate within 7 meters 60 centimeters distance of flammable materials (gas, alcohol etc.) or do not place near motor devices that are not expected to run. Heater place solvent, thinner and similar flammable materials on or near the working surfaces of the heating devices or do not place near electrical house appliances.

Technical Features





suc	Height (H)	681 mm
Dimensions	Width (W)	725 mm
Dim	Depth (D)	260 mm
Total Power (W)		2800 (4*700)
Feed (V/Hz)		220-240V ~, 50/60 Hz
Drawing Current (A)		12.2 A
Protection degree		IP 20
Class		

Models	S3100WT
1	700 W
2	1400 W
3	2100 W
4	2800 W
Total power	2800 W

Stand Assembly



Figure 1-1

Figure 1-2

• After removing the product from the packaging, place the feet on the skids on the body as shown in Figure 1-1, then push the slides in the direction shown in Figure 1-2 until they slide to the end of the canal.

• Once the foot is seated, it should be mounted with the connecting screws as shown on the side.

• When the feet are to be removed, the mounted screws under the feet are dismantled by pushing them in the direction of the arrow under the foot after they have been removed.

Technical Features and Using Your Heater

Using your Heater

Plug your device's plug into a suitable grounded socket. Adjust the thermostat. Bring the on / off switch to the running position.

Thermostat operation: One heating element runs independently of the thermostat during product operation as precaution. If you find the room temperature to be low, increase the thermostat setting.

To finish the operating of your device, bring the thermostat to 'min' position and on-off buttons to 'off' position, and unplug the device.

Attention ! There is a safety system inside your device. In case of any tipping over the safety system shall start and cut off electricity.

Control Panel

0	Off
	Upper heating element in operation
	Lower and upper heating element in operation
	3 heating element in operation
	4 heating element in operation
	Thermostat gauge



Maintenance and Cleaning

It is very important to perform careful and regular maintenance of the device in accordance with the recommendations made in this manual so that it can run efficiently for a long time.

- The cleanliness of the reflector (reflecting mirror) and quartz glass tubes must be checked at least once a month by the user. The cleaning and maintenance instruction must be applied if dirty.

- According to the amount of dust in the place of use, the said checks should be performed more often.

- Power cable and plug must be checked while cleaning the device. If there is a deformation in the power cord or the plug, it must be taken to the authorized service.

- Reflector, wire and body deformation must be visually inspected while cleaning the device. If there is a deformation, authorized service must be called for things to do.

- It is recommended that the reflector is changed every two years for the device to run more efficiently. Reflector must be changed by the authorized service. A clean reflector ensures the maximum level of heating efficiency.

Cleaning

Attention! Regular and careful cleaning performed by the user will ensure that your device will run more efficiently and prolong its life.

- Your device must be turned off before starting to clean, its power cord must be unplugged from the socket for safety and you must wait until it cools down.

- If the reflector (reflecting mirror) and quartz glass tube is dirty, it must be cleaned from the outside with dry air without opening the protective cage wire of the device, if possible.

- The outer surface of the device must be cleaned with a soft cotton cloth or a soft brush.

- Never use corrosive or melting liquids to clean the heater. These materials may damage the plastic parts.

Do not clean your device using vapor cleaners.

Troubleshooting

Please check the points below before calling the technical service about the problems you might encounter with your device.

Problems:

Device does not run.

Solutions:

- Check whether the plug is plugged into the socket correctly.
- Ensure the device is in vertical position. (Your device has balance safety.)
- Ensure that the running switch and the thermostat of the device are in correct, -open position.
- -Check whether there is a problem in the house's electrical installation.
- -Ensure you follow the using instructions.



Compliance with WEEE regulation and disposal of waste product

This product is T.C. It does not contain harmful and prohibited substances specified in the Waste Electrical and Electronic Equipment Control Regulation published by the Ministry of Environment and Urbanization. It complies with WEEE Regulation.

This product is manufactured from high quality parts and materials that can be recycled and reused.

Therefore, do not dispose of the product with household or other waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment.

Ask your local government about these collection points. Help protect the environment and natural resources by recycling used products.

Before disposing of the product, cut the power plug and make it inoperable for the safety of children.

Packaging information

The packaging of the product is produced from recyclable materials in accordance with our National Legislation.

Do not dispose of the packaging waste together with household or other wastes, dispose of it at the packaging collection points specified by the local authority.