

TTK 140 S / TTK 170 S / TTK 350 S / TTK 650 S

EN

ORIGINAL INSTRUCTIONS
DEHUMIDIFIER



Table of contents

Notes regarding the instructions	2
Safety	3
Information about the device	6
Transport and storage	8
Assembly and installation	8
Operation	10
Available accessories	11
Errors and faults	12
Maintenance	13
Technical annex	17
Disposal	24
Declaration of conformity	24

Notes regarding the instructions

Symbols



Danger

This symbol indicates dangers to the life and health of persons due to extremely flammable gas.



Danger

This symbol indicates dangers to life and health of persons due to the flammable substance R454C.



Warning of electrical voltage

This symbol indicates dangers to the life and health of persons due to electrical voltage.



Warning

This signal word indicates a hazard with an average risk level which, if not avoided, can result in serious injury or death.



Caution

This signal word indicates a hazard with a low risk level which, if not avoided, can result in minor or moderate injury.

Note

This signal word indicates important information (e.g. material damage), but does not indicate hazards.



Info

Information marked with this symbol helps you to carry out your tasks quickly and safely.



Follow the manual

Information marked with this symbol indicates that the instructions must be observed.

You can download the current version of the instructions and the EU declaration of conformity via the following link:

TTK 140 S



<https://hub.trotec.com/?id=42763>

TTK 170 S



<https://hub.trotec.com/?id=42764>

TTK 350 S



<https://hub.trotec.com/?id=42765>

TTK 650 S



<https://hub.trotec.com/?id=42766>



Safety

Read this manual carefully before starting or using the device. Always store the manual in the immediate vicinity of the device or its site of use!



Warning

Read all safety warnings and all instructions.

Failure to follow the warnings and instructions may result in electric shock, fire and / or serious injury.

Save all warnings and instructions for future reference.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Do not use the device in potentially explosive rooms.
- Do not use the device in aggressive atmosphere.
- Set the device up in an upright and stable position.
- Let the device dry out after a wet clean. Do not operate it when wet or when in moist surroundings.
- Do not use the device with wet or damp hands.
- Do not expose the device to directly squirting water.
- Never insert any objects or limbs into the device and never use it as source of ignition.
- Do not cover or transport the device during operation.
- Do not sit on the device.
- This appliance is not a toy! Keep away from children and animals. Do not leave the device unattended during operation.
- Check accessories and connection parts for possible damage prior to every use of the device. Do not use any defective devices or device parts.
- Ensure that all electric cables outside of the device are protected from damage (e.g. caused by animals). Never use the device if electric cables or the power connection are damaged!
- The electrical connection must correspond to the specifications in chapter Technical data.
- Insert the mains plug into a properly secured mains socket.
- Observe the device's power input, cable length and intended use when selecting extensions to the power cable. Completely unroll extension cables. Avoid electrical overload.

- Before carrying out maintenance, care or repair work on the device, remove the mains plug from the mains socket. Hold onto the mains plug while doing so.
- Switch the device off and disconnect the power cable from the mains socket when the device is not in use.
- Do not under any circumstances use the device if you detect damages on the mains plug or power cable. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Defective power cables pose a serious health risk!
- When positioning the device, observe the minimum distances from walls and other objects as well as the storage and operating conditions specified in the Technical data chapter.
- Make sure that the air inlet and outlet are not obstructed.
- Make sure that the suction side is kept free of dirt and loose objects.
- Do not remove any safety signs, stickers or labels from the device. Keep all safety signs, stickers and labels in legible condition.
- Only transport the device in an upright position with an emptied condensation tank or drain hose.
- Discharge the collected condensate before transport and storage. Do not drink it. Health hazard!



Safety warnings for devices containing flammable refrigerants

- Only position the device in rooms where potentially leaking refrigerant cannot accumulate.
- Only position the device in rooms where there is no source of ignition (e.g. open flames, an active gas appliance or an electric heater).
- Please note that the refrigerant is odourless.
- Only install the device in compliance with the national installation regulations.
- Observe the national gas regulations.
- Only install, operate and store the device TTK 140 S / TTK 170 S / TTK 350 S / TTK 650 S in a room measuring more than 4 m².
- Store the device in a way that no mechanical damage can occur.
- Please note that the connected ducts must not contain any sources of ignition.
- R290 is a refrigerant that complies with European environmental regulations. No part of the cooling circuit may be perforated.
- R454C comes with a low GWP factor (Global Warning Potential) of 146 and an ODP (ozone depletion potential) of 0.

- Observe the maximum refrigerant capacity in the technical data.
- Do not drill through or burn.
- Do not use any means other than those recommended by the manufacturer for accelerating the defrosting process.
- Every person working with or at the refrigerant circuit must be able to provide a certificate of qualification issued by a body accredited by the industry, demonstrating their competence in the safe use of refrigerants based on a procedure well-known in the industry.
- Service work may only be carried out in accordance with the manufacturer's specifications. If maintenance and repair work require the support of additional persons, the person trained in handling flammable refrigerants shall continuously supervise the work carried out.
- Unventilated rooms, in which the device is installed, operated or stored, must be built in a way to ensure that potentially leaking refrigerant cannot accumulate. This serves to avoid fire or explosion hazards resulting from an ignition of the refrigerant by an electric furnace, cooking stove or another ignition source.
- The entire refrigerant circuit is a maintenance-free, hermetically sealed system and may only be maintained or repaired by specialist companies for cooling and air-conditioning or by Trotec.

Intended use

Only use the device for drying and dehumidifying room air, while adhering to and following the technical data.

Intended use comprises:

- dehumidifying and drying:
 - living rooms, bedrooms, bathrooms and basements
 - laundries, holiday homes, camper vans, boats
- maintaining the dryness of:
 - storage spaces, archives, laboratories, garages
 - bathrooms, wash rooms, changing rooms etc.

Improper use

- Do not place the device on wet or flooded ground.
- Do not place any objects, e.g. clothing, on the device.
- Do not use the device outdoors.
- Any unauthorised modifications, alterations or structural changes to the device are forbidden.
- Any operation other than as described in this manual is prohibited. Non-observance renders all claims for liability and guarantee null and void.

Personnel qualifications

People who use this device must:

- be aware of the dangers that occur when working with electric devices in damp areas.
- have read and understood the instructions, especially the Safety chapter.

Maintenance tasks which require the housing to be opened must only be carried out by specialist companies for cooling and air-conditioning or by Trotec.

Safety signs and labels on the device

Note

Do not remove any safety signs, stickers or labels from the device. Keep all safety signs, stickers and labels in legible condition.

The following safety signs and labels are attached to the device:

TTK 140 S / TTK 170 S

WARNING • WARNUNG • ATTENTION

- DE** Das Gerät muss in einem Raum mit einer Grundfläche größer als 4 m² aufgestellt, betrieben und gelagert werden.
- EN** Appliance shall be installed, operated and stored in a room with floor area larger than 4 m².
- FR** L'appareil doit être installé, utilisé et entreposé dans une pièce avec une surface supérieure à 4 m².



TTK 350 S / 650 S

WARNING • WARNUNG • ATTENTION

- DE** Das Gerät muss in einem Raum mit einer Grundfläche größer als 4 m² aufgestellt, betrieben und gelagert werden.
- EN** Appliance shall be installed, operated and stored in a room with floor area larger than 4 m².
- FR** L'appareil doit être installé, utilisé et entreposé dans une pièce avec une surface supérieure à 4 m².





Follow the manual

This symbol indicates that the operating manual must be observed.



Follow the repair manual

Disposal, maintenance and repair work of the refrigerant circuit may only be carried out in accordance with the manufacturer's specifications and by persons having a certificate of qualification. A corresponding repair manual is available from the manufacturer upon request.

Residual risks



Danger

Natural refrigerant propane (R290)!

H220 – Extremely flammable gas.

H280 – Contains gas under pressure; may explode if heated.

P210 – Keep away from heat, sparks, open flames and other ignition sources. No smoking.

P377 – Leaking gas fire: Do not extinguish, unless leak can be stopped safely.

P410+P403 – Protect from sunlight. Store in a well-ventilated place.



Warning

The device is not a toy and does not belong in the hands of children.



Warning

Risk of suffocation!

Do not leave the packaging lying around. Children may use it as a dangerous toy.

Note

Do not operate the device without an inserted air filter! Without the air filter, the inside of the device will be heavily contaminated. This could reduce the performance and result in damage to the device.

Note

When operated with condensation tank, make sure that the condensation tank is inserted correctly!

If the condensation tank is removed or not installed correctly, the device does **not** switch off.



Danger

Refrigerant R454C!

H220 – Extremely flammable gas.

H280 – Contains gas under pressure; may explode if heated.

P210 – Keep away from heat, sparks, open flames and other ignition sources. No smoking.

P381 – Eliminate all ignition sources if safe to do so.

P403 – Store in a well-ventilated place.



Warning of electrical voltage

Work on the electrical components must only be carried out by an authorised specialist company!



Warning of electrical voltage

Before any work on the device, remove the mains plug from the mains socket!

Hold onto the mains plug while pulling the power cable out of the mains socket.



Warning

Dangers can occur at the device when it is used by untrained people in an unprofessional or improper way! Observe the personnel qualifications!

Behaviour in the event of an emergency

1. Switch off the device.
2. In an emergency, disconnect the device from the mains feed-in: Hold onto the mains plug while pulling the power cable out of the mains socket.
3. Do not reconnect a defective device to the mains.

Information about the device

Description of the device

The device uses the principle of condensation to automatically dehumidify rooms.

The fan sucks damp room air through the air inlet, the air filter, the evaporator and to the condenser located behind it. The air is cooled at the cold evaporator until it is below the dew point. Water vapour contained in the room air precipitates on the evaporator fins as condensation or rime. The dehumidified, cooled air is slightly warmed at the condenser and blown out again. The drier air thus conditioned mixes with the air in the room. The humidity in the room where the device is positioned is reduced as air constantly circulates through the device.

The condensation is fed from the device through the condensation drain hose connected to the hose connector into an external container or drain.

Optionally, the condensed water can also be discharged from the device by means of a retrofitted condensate pump (see chapter Installing the condensate pump).


For easy operation and transport, the device is fitted with an on / off switch, an operating hours counter, a transport handle and wheels. Two feet with rubber buffers prevent the device from rolling away.

The device can reduce the relative humidity of a room to approx. 32 %. Due to the heat radiation generated during operation, the room temperature may rise by approx. 1–4 °C.


Models

The TTK S series comprises the following devices:


TTK 140 S

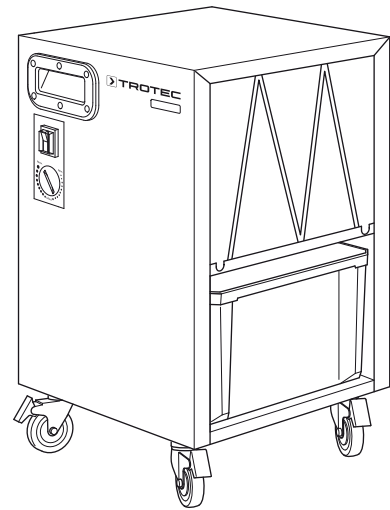

TTK 170 S / TTK 350 S

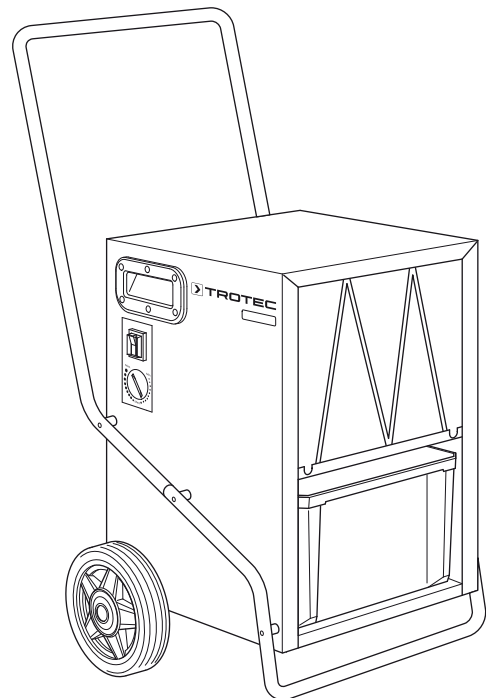


TTK 650 S

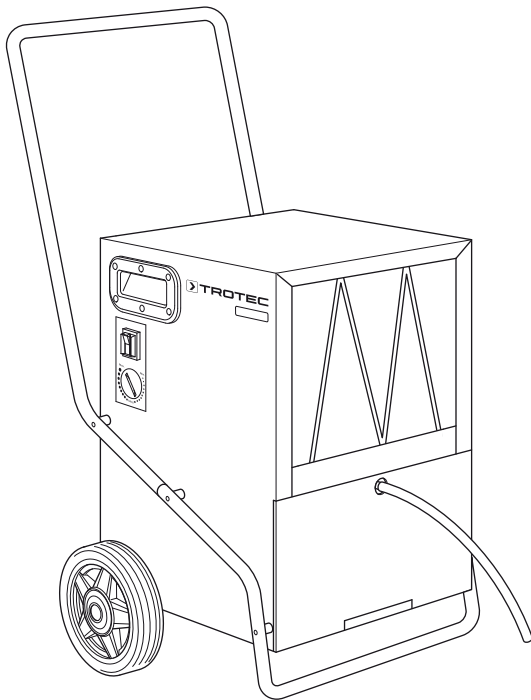

Note!

For simplification purposes the figures used in this documentation only depict one device, which can deviate from the actual version. The factual information content remains unaffected. If necessary in case of relevant differences the respective devices will be shown.

Device depiction

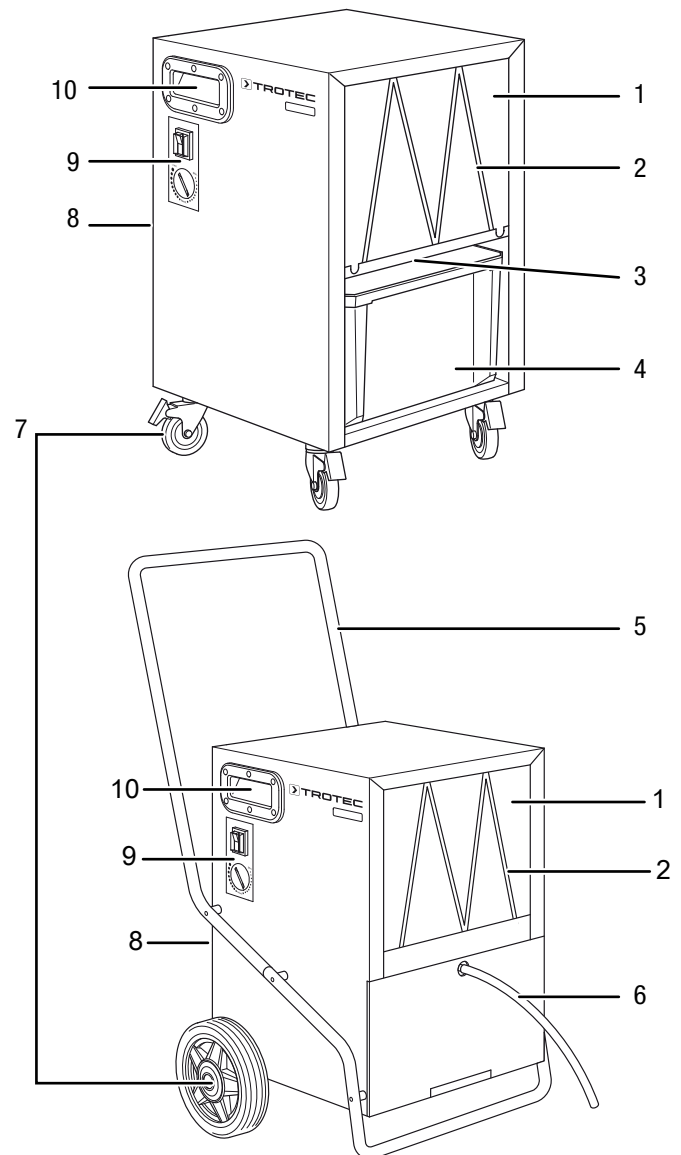

No.	Designation
1	Air filter at air inlet
2	Fixing bar of the air filter
3	Hose connector for condensation drain hose (TTK 140 S, TTK 170 S and TTK 350 S only)
4	Condensation tank (TTK 140 S, TTK 170 S and TTK 350 S only)
5	Transport handle (TTK 170 S, TTK 350 S and TTK 650 S only)
6	Condensation drain hose (TTK 650 S only)
7	Castor (TTK 140 S) Wheel (TTK 170 S / TTK 350 S / TTK 650 S)
8	Air outlet
9	Operating elements
10	Carrying handle

Transport and storage

Note

If you store or transport the device improperly, the device may be damaged.

Note the information regarding transport and storage of the device.

Transport

Before transporting the device, observe the following:

- Switch off the device.
- Hold onto the mains plug while pulling the power cable out of the mains socket.
- Drain the remaining condensate from the device and the condensation drain hose (see chapter Maintenance).
- Do not use the power cable to drag the device.
- After unpacking the devices, mount the transport handle as described in the chapter Assembly and installation.

After transporting the device, observe the following:

- Set up the device in an upright position after transport.
- Lock the castors of the TTK 140 S.
- After having transported the device in horizontal position, leave the device to rest for 12 to 24 hours, so the refrigerant can accumulate within the compressor. Wait 12 to 24 hours before switching the device back on! Acting contrary might lead to compressor damage and a malfunctioning device. Any warranty claims will be voided in this case.

Storage

Before storing the device, observe the following:

- Drain the remaining condensate from the device and the condensation drain hose (see chapter Maintenance).
- Hold onto the mains plug while pulling the power cable out of the mains socket.
- Drain any possibly remaining condensate.

When the device is not being used, observe the following storage conditions:

- Only store the device in a room measuring more than 4 m².
- Only position the device in rooms where there is no source of ignition (e.g. open flames, an active gas appliance or an electric heater).
- dry and protected from frost and heat
- in an upright position where it is protected from dust and direct sunlight
- with a cover to protect it from invasive dust, if necessary
- Place no further devices or objects on top of the device to prevent it from being damaged.

Assembly and installation

Scope of delivery

- 1 x Device
- 1 x transport handle (TTK 170 S / TTK 350 S / TTK 650 S)
- 1 x Manual
- 1 x Condensation drain hose
- 1 x Hose adapter

Unpacking the device

1. Open the cardboard box and take the device out.
2. Completely remove the packaging.
3. Fully unwind the power cable. Make sure that the power cable is not damaged and that you do not damage it during unwinding.

Assembly

Use tools suitable for the intended task.

Mounting the transport handle (TTK 170 S / TTK 350 S / TTK 650 S)


Prior to initial start-up, the transport handle must be attached to the device. To do so, please proceed as follows:




Info

After unpacking the device, the two lower screws must be unscrewed and the transport handle remounted using only one screw (i.e. one screw remains).

A.

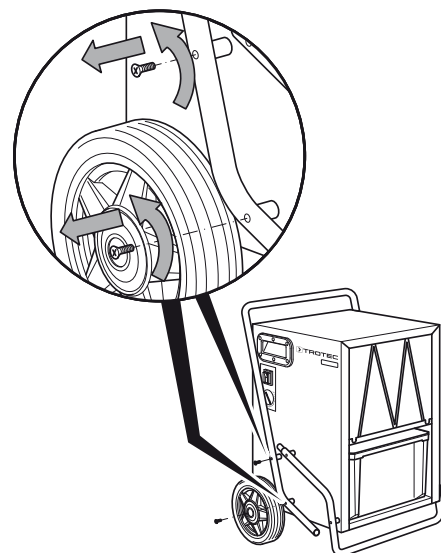


B.

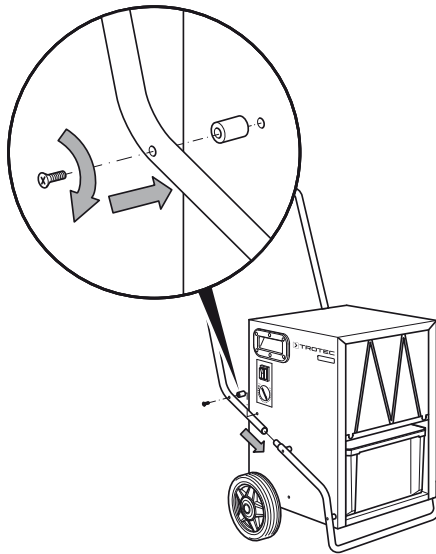

Start-up

When positioning the device, observe the minimum distance from walls or other objects as described in the Technical data chapter.

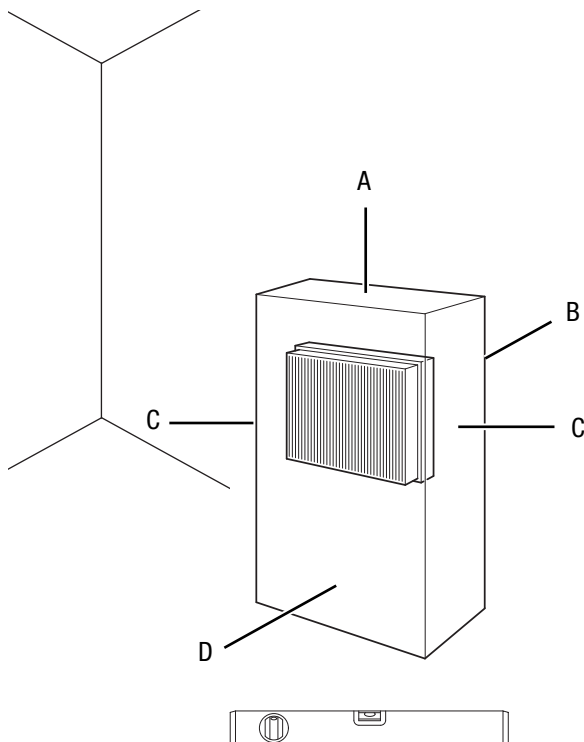


- Do not create tripping hazards when laying the power cable or other electric cables, especially when positioning the device in the middle of the room. Use cable bridges.
- Make sure that extension cables are completely unrolled.
- When positioning the device, keep a sufficient distance to heat sources.
- Make sure that no curtains or other objects interfere with the air flow.
- When positioning the device, particularly in wet areas, secure it locally with an RCD (residual current device) which complies with the respective regulations.

Inserting the air filter

Note

Do not operate the device without an inserted air filter! Without the air filter, the inside of the device will be heavily contaminated. This could reduce the performance and result in damage to the device.

- Make sure that the air filter is installed before switching the device on.

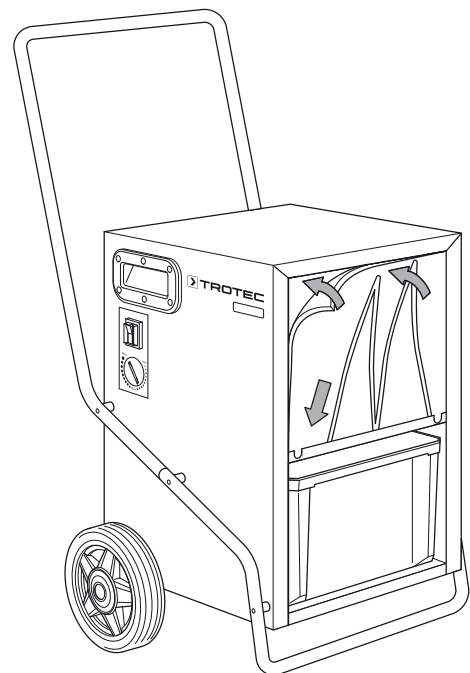


Connecting the power cable

- Insert the mains plug into a properly secured mains socket.

- Before restarting the device, check the condition of the power cable. If there are doubts as to the sound condition, contact the customer service.
- Only position the device in rooms where potentially leaking refrigerant cannot accumulate.
- Only position the device in rooms where there is no source of ignition (e.g. open flames, an active gas appliance or an electric heater).
- Set the device up in an upright and stable position.

Operation


Operating elements

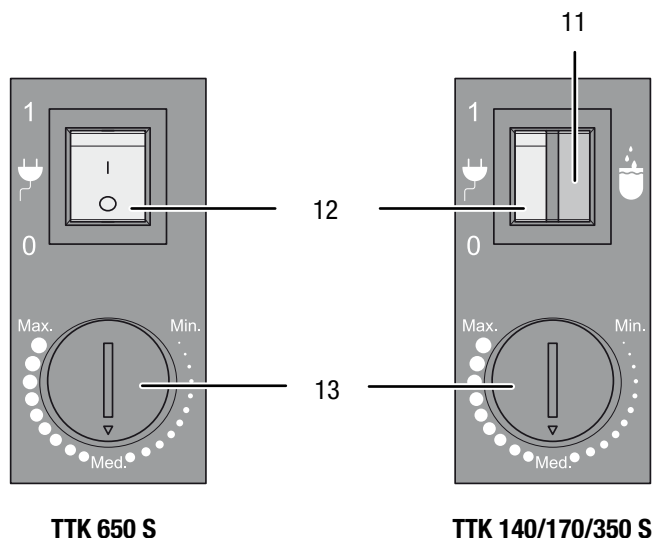

No.	Designation	Meaning
11	Condensation tank indicator light (TTK 140 S, TTK 170 S and TTK 350 S only)	Illuminated when the condensation tank is full.
12	On/off switch	Switching the device on and off; Is illuminated when the device is switched on
13	Rotary switch	Selection of relative room humidity

Operating hours/ power consumption counter

The device is optionally also available with a simple operating hours counter or with a combined operating hours and power consumption counter (see fig.). Contact your Trotec customer service.

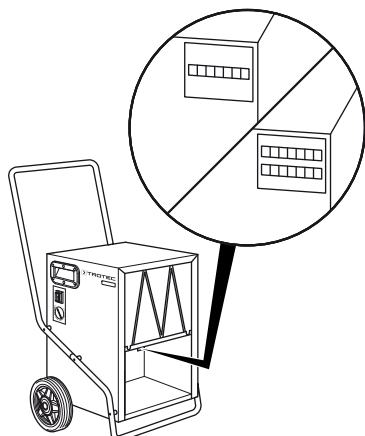

Switching the device on

Once you have completely installed the device as described in the Start-up chapter, you can switch it on.

- Carry out the following inspections prior to switch-on:
 - ⇒ **The following only applies to TTK 140 S, TTK 170 S and TTK 350 S:**
Ensure that the condensation tank is empty and inserted correctly.
 - ⇒ **The following only applies to the TTK 650 S:**
Ensure that the condensation drain hose has been laid and mounted properly.
- Insert the mains plug into a properly secured mains socket.
- Switch on the device at the mains switch (12).
- Ensure that the mains switch (12) is lit.
- The following only applies to TTK 140 S, TTK 170 S and TTK 350 S:**
Check whether the condensation tank indicator light (11) is out. Otherwise, empty the condensation tank.
- Adjust the relative room humidity level with the rotary switch (13).


Continuous operation mode

In continuous operation mode, the device dehumidifies the air constantly, regardless of the humidity. To start continuous operation mode, set the rotary switch (13) to Max.


Connecting the condensation drain hose (TTK 140 S / TTK 170 S / TTK 350 S)

For continuous operation or unattended dehumidification, please connect a suitable condensation drain hose to the device.

-

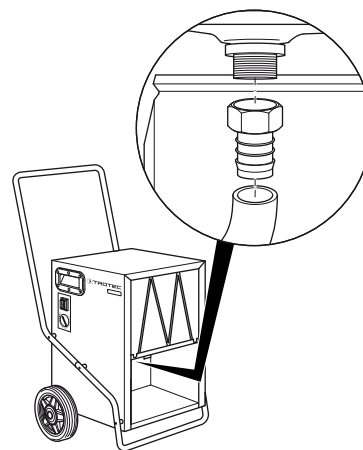


2.

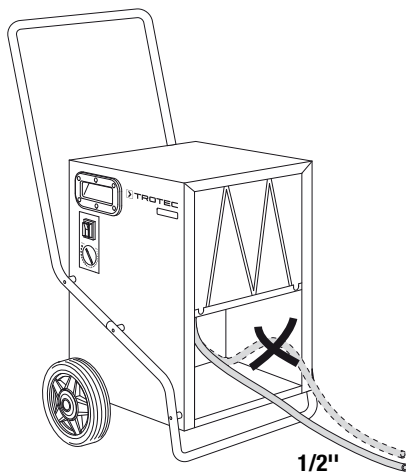


Connecting the condensation drain hose (TTK 650 S)

For continuous operation or unattended dehumidification, please connect a suitable condensation drain hose to the device.

1.

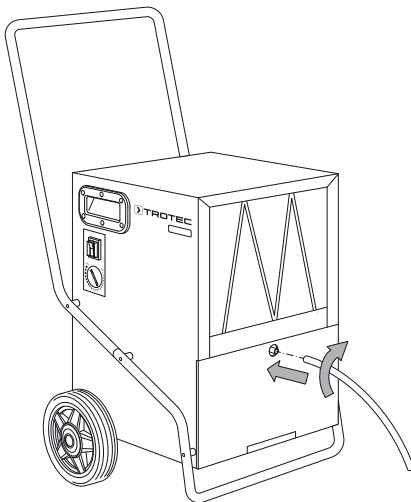

2.

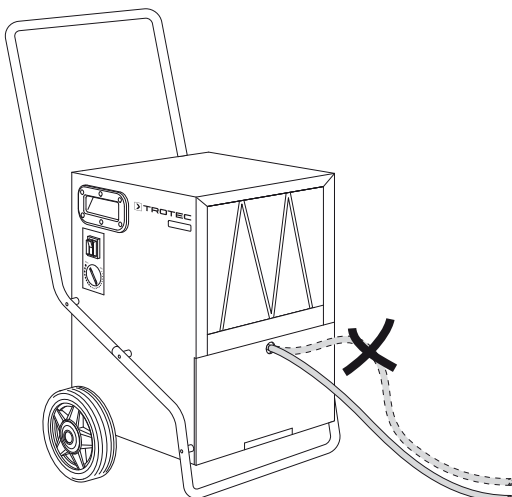

Automatic defrost

If the room temperature is below 11 °C, the evaporator will freeze during dehumidification. The device will then carry out an automatic defrost. The duration of the defrost process can vary.

- Do not switch off the device during automatic defrost. Do not remove the mains plug from the mains socket.

Operation with condensate pump (optional)

Note

The connection for the hose adapter is located in the inside of the device.

Optionally, the condensed water can also be discharged from the device by means of a retrofitted condensate pump (see chapter Available accessories). With a pump performance of up to 50 m and a maximum pump height of 4 m, the condensate can even be continuously discharged across storeys of a building.

Shutdown



Warning of electrical voltage

Do not touch the mains plug with wet or damp hands.

- Switch off the device.
- Hold onto the mains plug while pulling the power cable out of the mains socket.
- Clean the device according to the Maintenance chapter.
- Store the device according to the Storage chapter.

Available accessories



Warning

Only use accessories and additional equipment specified in the instructions.

Using insertion tools or accessories other than those specified in the instructions may cause a risk of injury.

Designation	Article number
Air filter TTK 140 S	7.710.000.332
Air filter TTK 170 S	7.710.000.332
Air filter TTK 350 S	7.710.000.334
Air filter TTK 650 S	7.710.000.335
Condensate pump	6.100.003.020

Errors and faults

The device has been checked for proper functioning several times during production. If malfunctions occur nonetheless, check the device according to the following list.

The device does not start:

- Check the power connection.
- Check the power cable and mains plug for damage.
- Check the on-site fusing.
- Check the filling level of the condensation tank and empty it if necessary. The condensation tank indicator light (11) must not light up.

The device is running, but there is no formation of condensate:

- When using the condensate pump: Check the condensation tank and hoses for dirt.
- Ensure that the relative room humidity complies with the technical data.
- Check the air filter for dirt. If necessary, clean or replace the air filter.
- From the outside, check the condenser for dirt (see chapter Maintenance). If the condenser is dirty, have it cleaned by a specialist company or by Trotec.
- The device might carry out an automatic defrost. During automatic defrost, the device does not dehumidify.

The device is loud or vibrates:

- Check whether the device is set up in a stable and upright position.

Condensate is leaking:

- Check the device for leaks.

The compressor does not start:

- Check the room temperature. Observe the device's permissible operating range according to the technical data.
- Check whether the overheating protection of the compressor has tripped. Disconnect the device from the mains and let it cool down for approx. 10 minutes before reconnecting it.
- The device might carry out an automatic defrost. During automatic defrost, the device does not dehumidify.

The device gets very warm, is loud or loses power:

- Check the air inlets and air filters for dirt. Remove external dirt.
- From the outside, check the device for dirt (see chapter Maintenance). If the inside of the device is dirty, have it cleaned by a specialist company for cooling and air-conditioning or by Trotec.

Your device still does not operate correctly after these checks?

Please contact the customer service. If necessary, bring the device to a specialist company for cooling and air-conditioning or to Trotec for repair.

Maintenance

Maintenance intervals

Maintenance and care interval	before every start-up	as needed	at least every 2 weeks	at least every 4 weeks	at least every 6 months	at least annually
Check the air inlets and outlets for dirt and foreign objects and clean if necessary	X			X		
Clean the exterior		X				X
Visually check the inside of the device for dirt		X				X
Check the air filter for dirt and foreign objects and clean or replace if necessary	X		X			
Replace the air filter					X	
Check for damage	X					
Check the attachment screws		X				X
Test run						X
Empty the condensation tank and/or drain hose		X				

Maintenance and care log

Device type:

Device number:

Maintenance and care interval	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Check air inlets and outlets for dirt and foreign objects and clean if necessary																
Clean the exterior																
Visually check the inside of the device for dirt																
Check the air filter for dirt and foreign objects and clean or replace if necessary																
Replace the air filter																
Check for damage																
Check the attachment screws																
Test run																
Empty the condensation tank and/or drain hose																
Comments																

1. Date: Signature:	2. Date: Signature:	3. Date: Signature:	4. Date: Signature:
5. Date: Signature:	6. Date: Signature:	7. Date: Signature:	8. Date: Signature:
9. Date: Signature:	10. Date: Signature:	11. Date: Signature:	12. Date: Signature:
13. Date: Signature:	14. Date: Signature:	15. Date: Signature:	16. Date: Signature:

Activities required before starting maintenance



Warning of electrical voltage

Do not touch the mains plug with wet or damp hands.

- Switch the device off.
- Hold onto the mains plug while pulling the power cable out of the mains socket.



Warning of electrical voltage

Tasks which require the housing to be opened must only be carried out by authorised specialist companies or by Trotec.

Running capacitor

Note

Replace the running capacitor after 10,000 operating hours!

Refrigerant circuit



Danger

Natural refrigerant propane (R290)!

H220 – Extremely flammable gas.

H280 – Contains gas under pressure; may explode if heated.

P210 – Keep away from heat, sparks, open flames and other ignition sources. No smoking.

P377 – Leaking gas fire: Do not extinguish, unless leak can be stopped safely.

P410+P403 – Protect from sunlight. Store in a well-ventilated place.



Danger

Refrigerant R454C!

H220 – Extremely flammable gas.

H280 – Contains gas under pressure; may explode if heated.

P210 – Keep away from heat, sparks, open flames and other ignition sources. No smoking.

P381 – Eliminate all ignition sources if safe to do so.

P403 – Store in a well-ventilated place.

- The entire refrigerant circuit is a maintenance-free, hermetically sealed system and may only be maintained or repaired by specialist companies for cooling and air-conditioning or by Trotec.

Safety signs and labels on the device


Check the safety signs and labels attached to the device at regular intervals. Replace illegible safety signs!

Cleaning the housing

Clean the housing with a soft, damp and lint-free cloth. Ensure that no moisture enters the housing. Protect electrical components from moisture. Do not use any aggressive cleaning agents such as cleaning sprays, solvents, alcohol-based or abrasive cleaners to dampen the cloth.

Visual inspection of the inside of the device for dirt

1. Remove the air filter.
2. Use a torch to illuminate the openings of the device.
3. Check the inside of the device for dirt.
4. If you see a thick layer of dust, have the inside of the device cleaned by a specialist company for cooling and air-conditioning or by Trotec.
5. Put the air filter back in.

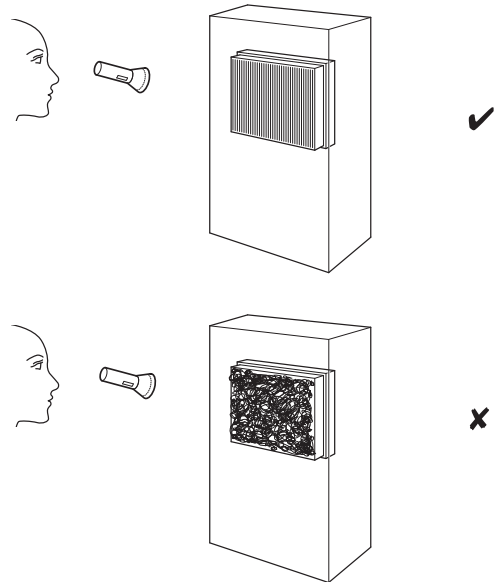



Cleaning the air filter

Note


Ensure that the air filter is not worn or damaged. The corners and edges of the air filter must not be deformed or rounded. Before reinserting the air filter, make sure that it is undamaged and dry!

The air filter has to be cleaned as soon as it is dirty. This is brought to light e.g. by a reduced capacity (see chapter Errors and faults).


1. Remove the air filter from the device.

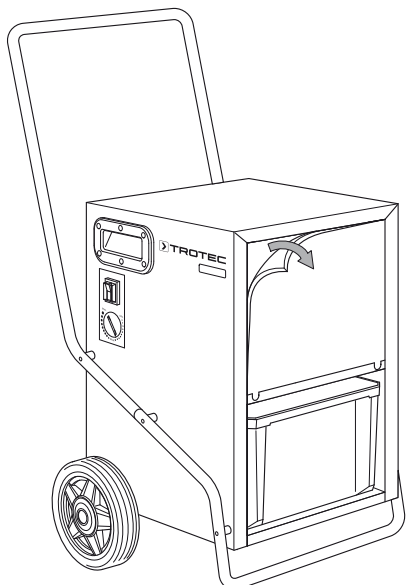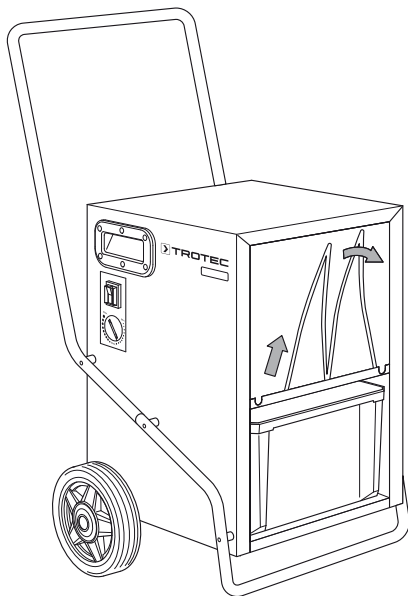

2. Clean the filter using a slightly damp, soft, lint-free cloth. If the filter is heavily contaminated, clean it with warm water mixed with a neutral cleaning agent.

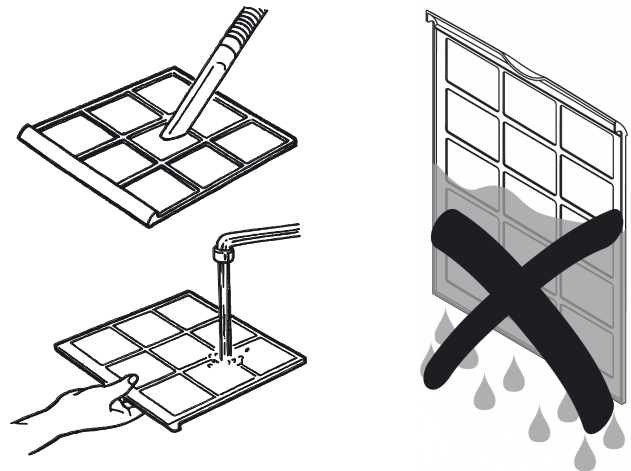

3. Allow the filter to dry completely. Do not insert a wet filter into the device!
4. Reinsert the air filter into the device.

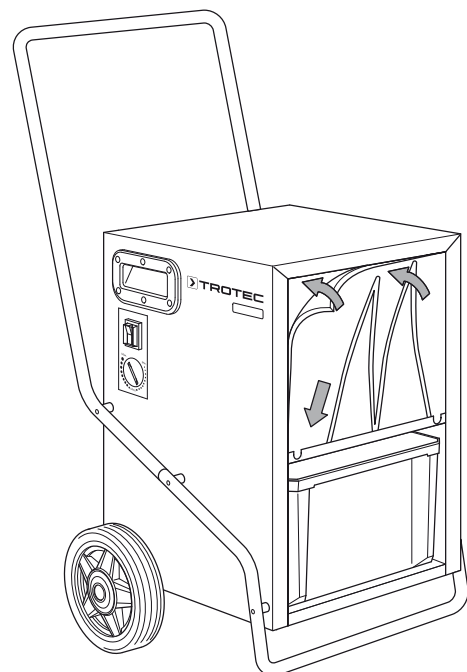

Emptying the condensation tank (TTK 140 S / TTK 170 S / TTK 350 S)




Info

The compressor always starts with a delay. This protects the compressor and thus increases its lifetime. If you remove the condensation tank from the device and reinsert it after emptying, the compressor will switch back on with a delay of approx. 3 min. This delay is also enabled in optional hygrostat operation. If the room humidity exceeds the setting of the selection switch, the compressor will only switch back on after a delay.


The fan keeps running independently of the compressor.

If the condensation tank is removed, the device does not switch off.


1.

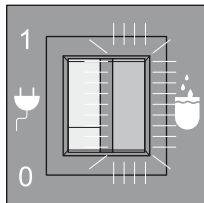


2.

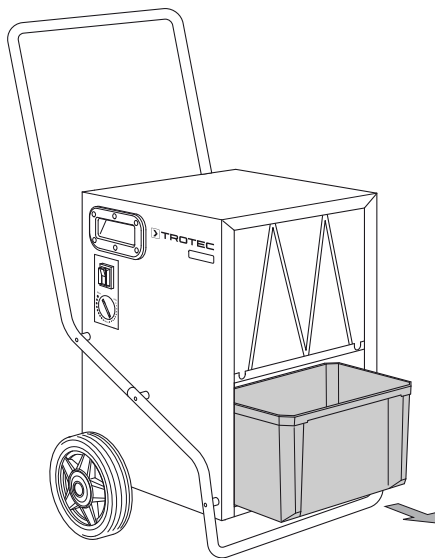

3.

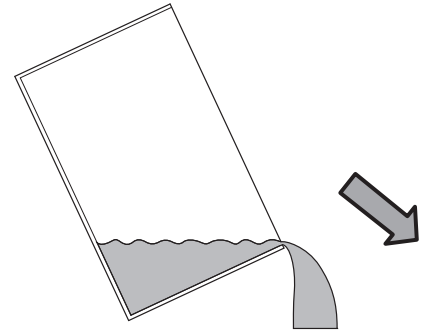

4.

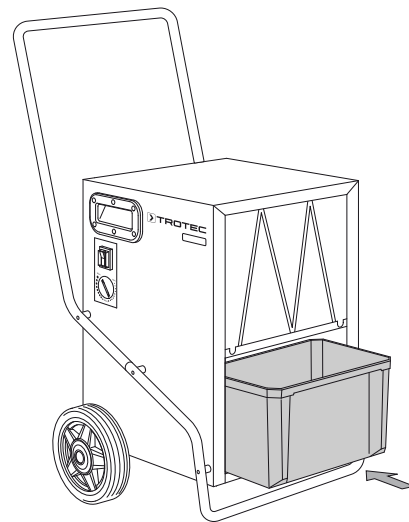

If the condensation tank is full, the condensation tank indicator light (11) will be illuminated. The compressor and fan will switch off.

Activities required after maintenance

If you want to continue using the device:

- Reconnect the device to the mains.

If you do not intend to use the device for a considerable time:

- Store the device according to the Storage chapter.

Technical annex

Technical data


Parameter	Value			
Model	TTK 140 S	TTK 170 S	TTK 350 S	TTK 650 S
Dehumidification performance @ 30 °C / 80 % RH	35 l / 24 h	40 l / 24 h	55 l / 24 h	91 l / 24 h
Dehumidification performance, max.	40 l / 24 h	50 l / 24 h	70 l / 24 h	150 l / 24 h
Operating range (temperature)	5 – 32 °C	5 – 32 °C	5 – 32 °C	5 – 32 °C
Operating range (relative humidity)	50 % – 90 % RH	50 % – 90 % RH	50 % – 90 % RH	50 % – 90 % RH
Max. permissible pressure	3.1 MPa	3.1 MPa	1.8 MPa	1.8 MPa
Pressure suction side	1.1 MPa	1.1 MPa	0.5 MPa	0.5 MPa
Pressure outlet side	3.1 MPa	3.1 MPa	1.8 MPa	1.8 MPa
Air volume flow	580 m³/h	580 m³/h	1000 m³/h	1000 m³/h
Mains connection	220-240 V / 50 Hz	220-240 V / 50 Hz	220-240 V / 50 Hz	220-240 V / ~ 50 Hz
Power consumption, max.	0.6 kW	0.6 kW	1.3 kW	1.9 kW
Nominal current	2.7 A	2.8 A	6 A	8.6 A
Water tank capacity	6 l	6 l	6 l	-
Refrigerant	R290 (propane)	R290 (propane)	R454C (F-Gas)	R454C (F-Gas)
Amount of refrigerant	150 g	150 g	650 g	1050 g
GWP factor	3	3	146	146
CO ₂ equivalent	0.00045 t	0.00045 t	0.09490 t	0.15 t
Sound pressure level LpA (1 m; complies with DIN 45635-01-KL3)	52 dB(A)	52 dB(A)	54 dB(A)	56 dB(A)
Dimensions (length x width x height)	400 x 400 x 605 mm	540 x 490 x 963 mm	530 x 500 x 965 mm	616 x 511 x 1022 mm
Minimum distance to walls or other objects	top (A): 50 cm rear (B): 50 cm sides (C): 50 cm front (D): 50 cm	50 cm 50 cm 50 cm 50 cm	50 cm 50 cm 50 cm 50 cm	50 cm 50 cm 50 cm 50 cm
Weight	29 kg	32 kg	39 kg	52 kg

Wiring diagram

TTK 140 S / TTK 170 S / TTK 350 S

Operating hours counter


Wiring diagram with Hour Counter just counting the compressor operation time (Optional)

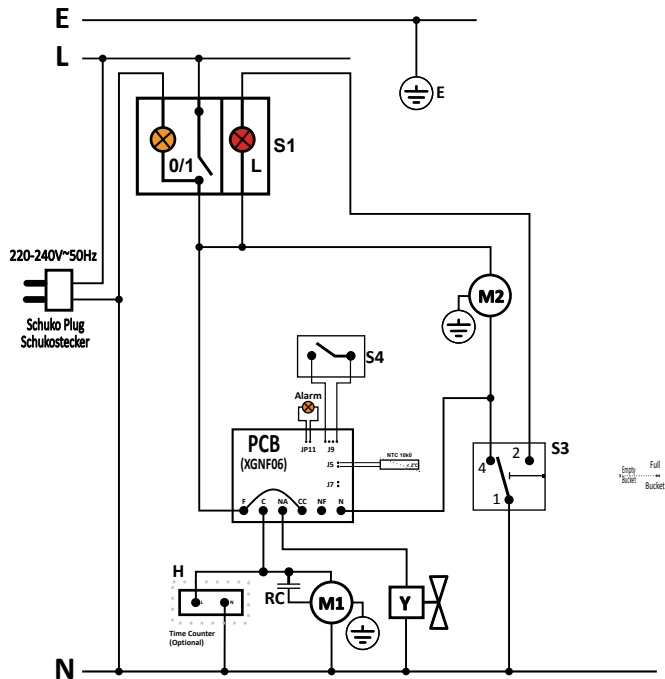

- E - Earthing / Erdung
- N - Common Line / Gemeinsame
- L - Line / Außenleiter
- S1 - On-Off Switch / Geräteschalter 0/1
- S3 - Micro Switch (Tank Full) / Mikroschalter Wippe Vollstand (Behälter voll)
- S4 - Humidistat / Hygrostat
- M1 - Compressor / Kompressor
- M2 - Fan motor / Lüftermotor
- Y - Two Way Valve / Abtau-Magnetventil
- RC - Running Capacitor / Motorbetriebskondensator
- H - Time Counter (Optional) / Zeit Zähler (Zusätzliche)

Operating hours counter with MID counter


Wiring diagram with Counter counting energy and time downstream the main switch (Optional)

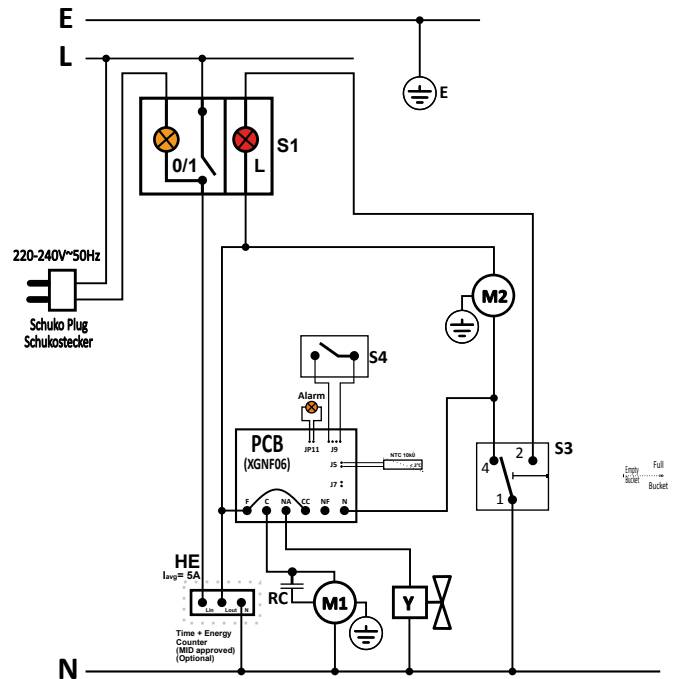


- E - Earthing / Erdung
- N - Common Line / Gemeinsame
- L - Line / Außenleiter
- S1 - On-Off Switch / Geräteschalter 0/1
- S3 - Micro Switch (Tank Full) / Mikroschalter Wippe Vollstand (Behälter voll)
- S4 - Humidistat / Hygrostat
- M1 - Compressor / Kompressor
- M2 - Fan motor / Lüftermotor
- Y - Two Way Valve / Abtau-Magnetventil
- RC - Running Capacitor / Motorbetriebskondensator
- HE - Time + Energy Counter (Optional) / Zeit + Energie Zähler (Zusätzliche)

TTK 650 S

Operating hours counter

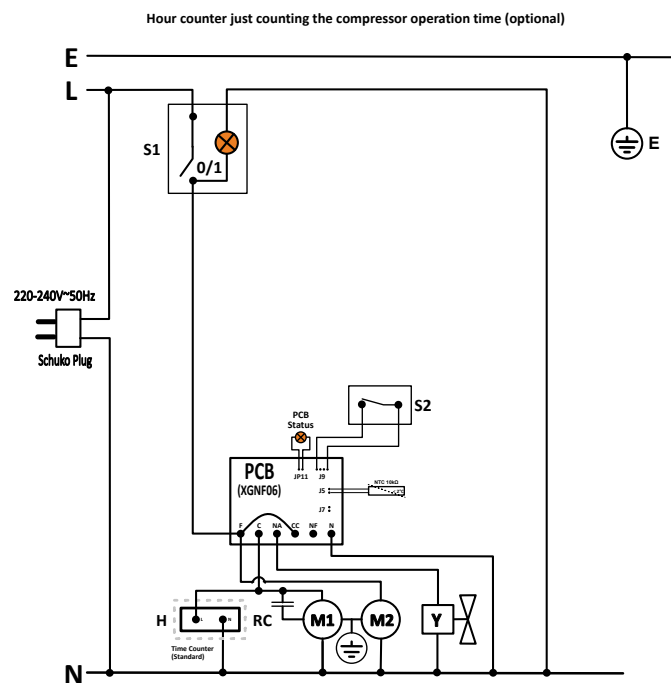

Operating hours counter with MID counter

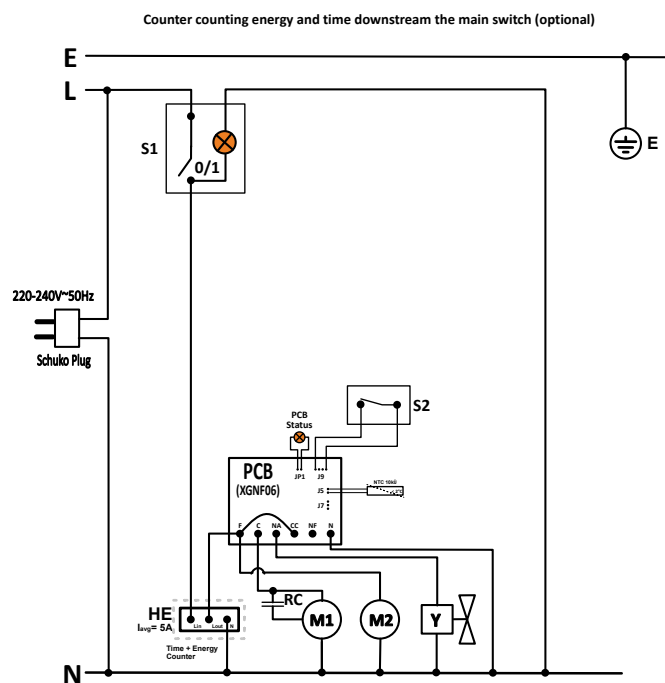


E - Earthing	E - Earthing
N - Common Line	N - Common Line
L - Line	L - Line
S1 - On-Off Switch	S1 - On-Off Switch
S2 - Humidistat	S2 - Humidistat
M1 - Compressor	M1 - Compressor
M2 - Fan motor	M2 - Fan motor
Y - Two Way Valve	Y - Two Way Valve
RC - Running Capacitor	RC - Running Capacitor
H - Time Counter (Optional)	HE - Time + Energy Counter (Optional)
P - Water Pump Socket	P - Water Pump Socket

Overview of spare parts and spare parts list TTK 140 S



Info

The position numbers of the spare parts differ from those describing the positions of the components mentioned in these instructions.

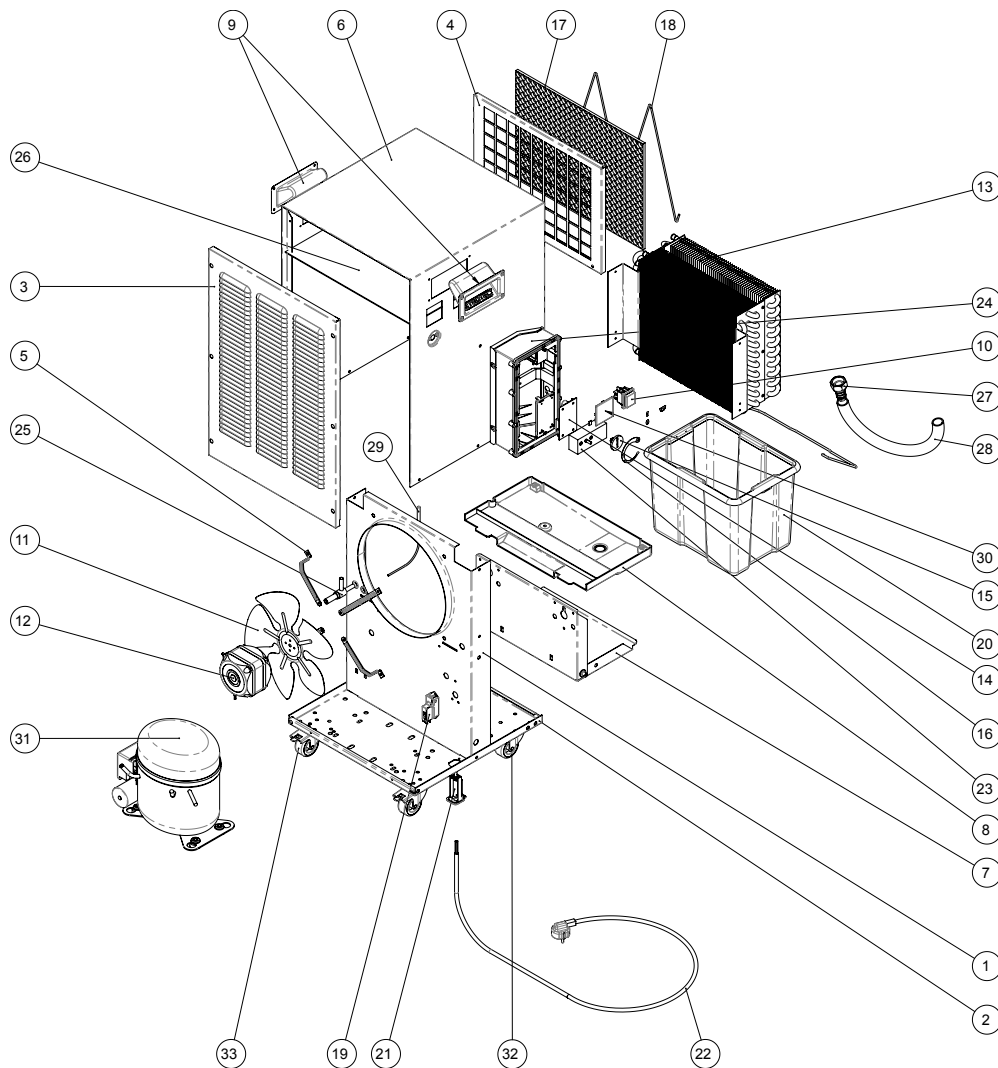


No.	Spare part	No.	Spare part	No.	Spare part
1	Main frame	12	Fan motor	23	Humidistat
2	Baseplate	13	Heat exchangers	24	Control's box
3	Air outlet grille	14	Electronic controller	25	Defrost valve
4	Air inlet grille	15	Humidistat knob	26	Top hood thermal isolating foam
5	Fan motor brackets	16	Control panel sticker	27	Hose connector
6	Pre-coated PVC hood	17	Air filter	28	Flexible hose
7	Water tank base plate (complete set)	18	Air filter bracket	29	Defrost sensor
8	Condensates water pan	19	Full water tank switching system	30	Hour counter gap cover
9	Plastic grip	20	Water tank	31	Compressor NLY90Rab
10	Main switch	21	Cable gland + electric terminal block	32	Spinning castor without brake
11	Fan blade	22	Power supply cable	33	Spinning castor with brake

Overview of spare parts and spare parts list TTK 170 S



Info

The position numbers of the spare parts differ from those describing the positions of the components mentioned in these instructions.

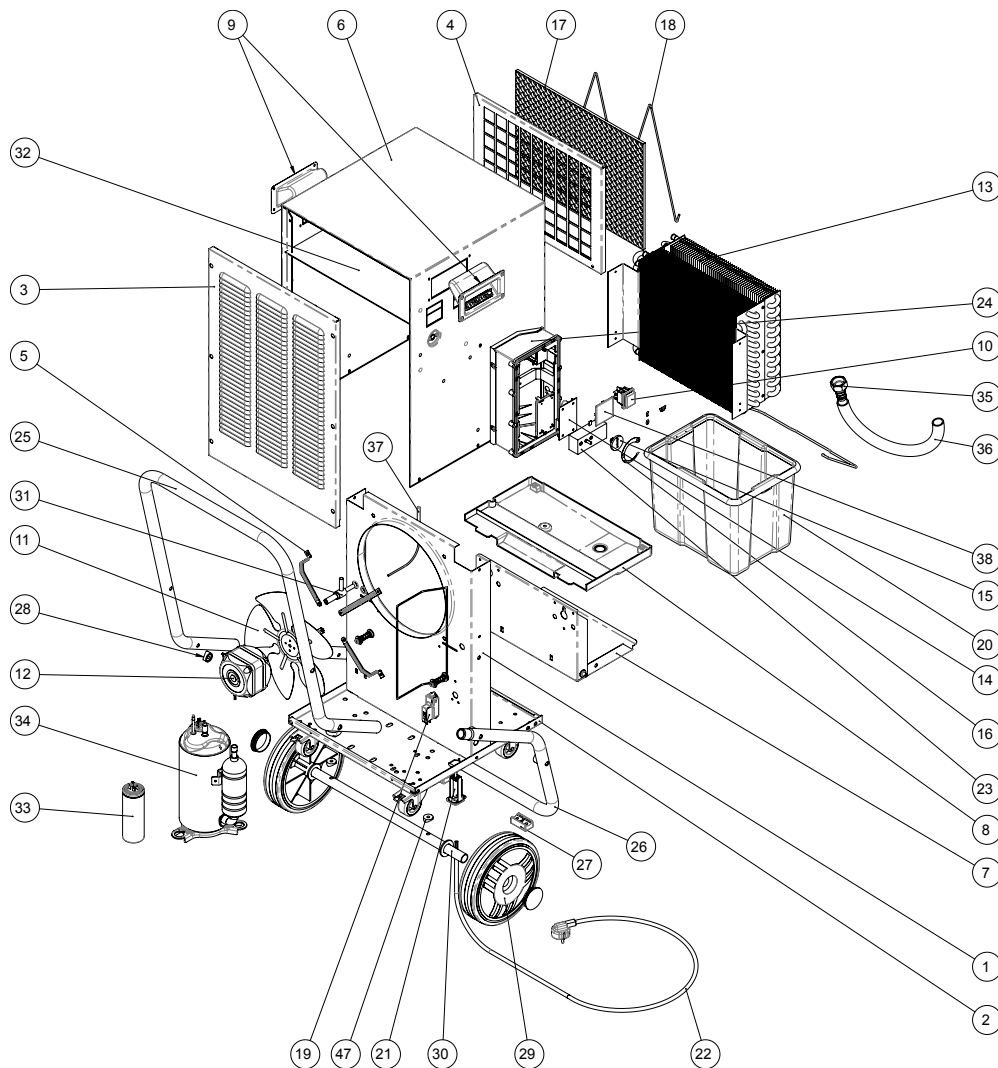


No.	Spare part	No.	Spare part	No.	Spare part
1	Main frame	14	Electronic controller	27	Saddle foot
2	Baseplate	15	Humidistat knob	28	Handle's saddle spacers
3	Air outlet grille	16	Control panel sticker	29	Wheel
4	Air inlet grille	17	Air filter	30	Wheel's axle
5	Fan motor brackets	18	Air filter bracket	31	Defrost valve
6	Pre-coated PVC hood	19	Full water tank switching system	32	Top hood thermal isolating foam
7	Water tank base plate (complete set)	20	Water tank	33	Running capacitor
8	Condensates water pan	21	Cable gland + electric terminal block	34	Compressor
9	Plastic grip	22	Power supply cable	35	Hose connector
10	Main switch	23	Humidistat	36	Flexible hose
11	Fan blade	24	Control's box	37	Defrost sensor
12	Fan motor	25	Tubular handle	38	Hour counter gap cover
13	Heat exchangers	26	Tubular foot	39	Axle's saddle spacer

Overview of spare parts and spare parts list TTK 350 S



Info

The position numbers of the spare parts differ from those describing the positions of the components mentioned in these instructions.

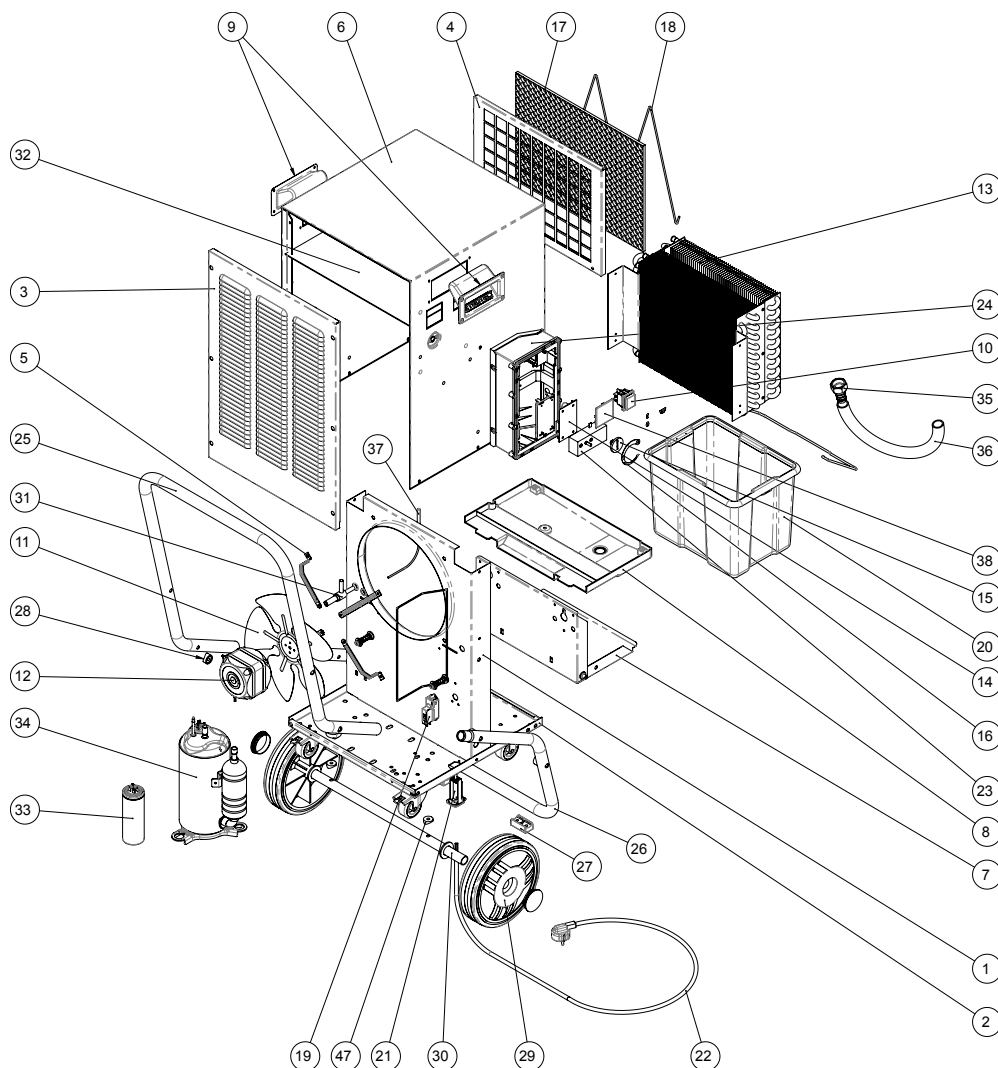


No.	Spare part	No.	Spare part	No.	Spare part
1	Main frame	14	Electronic controller	27	Saddle foot
2	Baseplate	15	Humidistat knob	28	Handle's saddle spacers
3	Air outlet grille	16	Control panel sticker	29	Wheel
4	Air inlet grille	17	Air filter	30	Wheel's axle
5	Fan motor brackets	18	Air filter bracket	31	Defrost valve
6	Pre-coated PVC hood	19	Full water tank switching system	32	Top hood thermal isolating foam
7	Water tank base plate (complete set)	20	Water tank	33	Running capacitor
8	Condensates water pan	21	Cable gland + electric terminal block	34	Compressor
9	Plastic grip	22	Power supply cable	35	Hose connector
10	Main switch	23	Humidistat	36	Flexible hose
11	Fan blade	24	Control's box	37	Defrost sensor
12	Fan motor	25	Tubular handle	38	Hour counter gap cover
13	Heat exchangers	26	Tubular foot	39	Axle's saddle spacer

Overview of spare parts and spare parts list TTK 650 S



Info

The position numbers of the spare parts differ from those describing the positions of the components mentioned in these instructions.

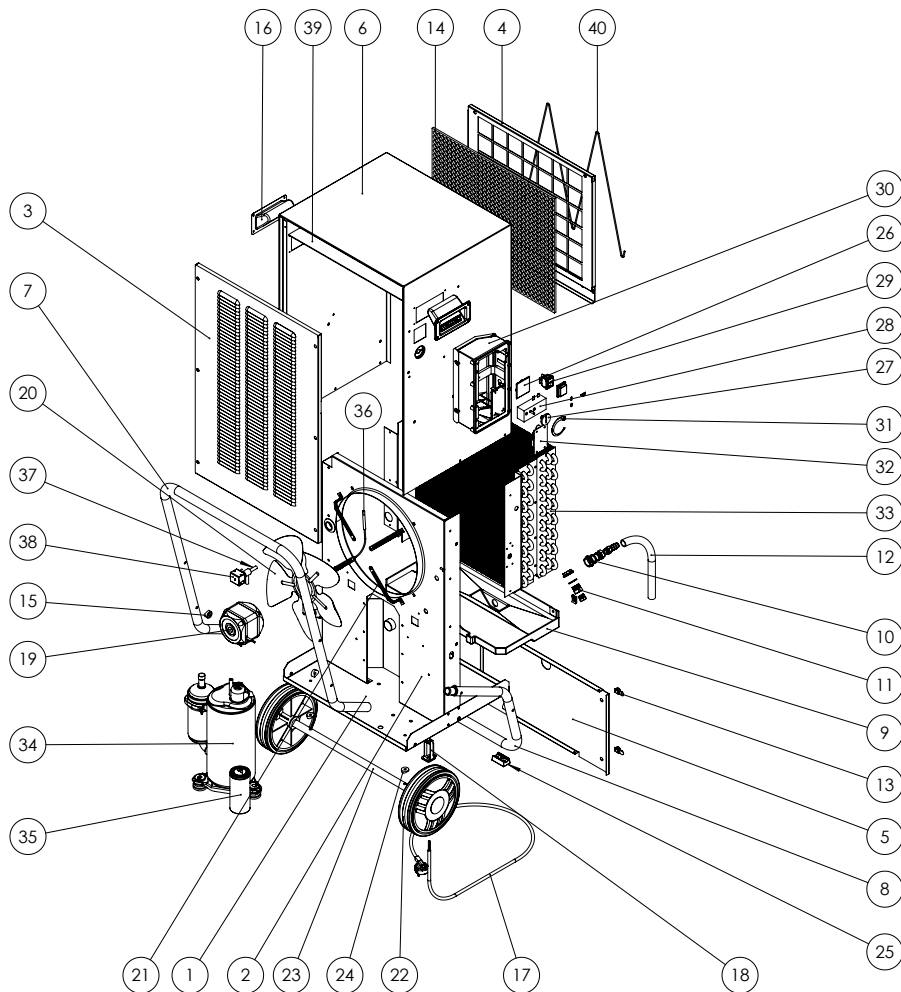

No.	Spare part	No.	Spare part	No.	Spare part
1	Baseplate	15	Handle's saddle spacer	29	Main switch
2	Structural element	16	Plastic grip	30	Control's box
3	Air outlet ventilation grille	17	Power supply cable	31	Control panel sticker
4	Air inlet ventilation grille	18	Cable gland + electric terminal block	32	Electronic controller
5	Back cover	19	Fan motor	33	Heat exchanger
6	Pre-coated PVC hood	20	Fan blade	34	Compressor
7	Tubular handle	21	Fan motor brackets	35	Running capacitor
8	Tubular foot	22	Wheel	36	Defrost sensor
9	Water pan	23	Wheel's axle	37	Defrost valve
10	Hose fitting	24	Axle's saddle spacer	38	Defrost valve coil
11	Hidraulic plug	25	Plastic feet	39	Top hood thermal isolating foam
12	Hose	26	Hour counter gap cover	40	Air filter bracket
13	1/4 turn lock	27	Humidistat knob		
14	Air filter	28	Humidistat		

Disposal



The icon with the crossed-out waste bin on waste electrical or electronic equipment stipulates that this equipment must not be disposed of with the household waste at the end of its life. You will find collection points for free return of waste electrical and electronic equipment in your vicinity. The addresses can be obtained from your municipality or local administration. For further return options provided by us please refer to our website <https://de.trotec.com/shop/>.

The separate collection of waste electrical and electronic equipment aims to enable the re-use, recycling and other forms of recovery of waste equipment as well as to prevent negative effects for the environment and human health caused by the disposal of hazardous substances potentially contained in the equipment.

The device is operated with fluorinated greenhouse gas which can be dangerous for the environment and contribute to global warming when emitted to the atmosphere.

Further information is provided on the nameplate.

Dispose of the refrigerant appropriately and according to the national regulations.

Have the refrigerant (propane) disposed of appropriately and according to the national regulations by a company with the relevant certification (European Waste Catalogue 160504).

Declaration of conformity

Declaration of conformity TTK 140 S / TTK 170 S / TTK 350 S/ TTK 650 S

The text below sets out the contents of the declaration of conformity. The signed declaration of conformity can be found at <https://hub.trotec.com/?id=42763>.

Declaration of conformity

in accordance with the EC Machinery Directive 2006/42/EC, Annex II, Part 1, Section A

Herewith, we – Trotec GmbH– declare that the machinery designated below was developed, constructed and produced in compliance with the requirements of the EC Machinery Directive in the version 2006/42/EC.

Product model / product: TTK 140 S / TTK 170 S / TTK 350 S/ TTK 650 S

Product type: dehumidifier

Year of manufacture as of: 2020

Relevant EU directives:

- 2011/65/EU: 01/07/2011
- 2014/30/EU: 29/03/2014
- 2012/19/EU: 24/07/2012
- 2015/863/EU

Applied harmonised standards:

- EN 60335-1:2012
- EN 60335-1:2012/AC:2014
- EN 60335-1:2012/A11:2014
- EN 60335-1:2012/A13:2017
- EN 60335-2-40:2003
- EN 60335-2-40:2003/A11:2004
- EN 60335-2-40:2003/A12:2005
- EN 60335-2-40:2003/A1:2006
- EN 60335-2-40:2003/AC:2006
- EN 60335-2-40:2003/A2:2009
- EN 60335-2-40:2003/AC:2010
- EN 60335-2-40:2003/A13:2012
- EN 60335-2-40:2003/A13:2012/AC:2013
- EN 61000-3-2:2014
- EN 61000-3-3:2013

Applied national standards and technical specifications:

- IEC 60335-1:2010
- IEC 60335-1:2010/AMD1:2013
- IEC 60335-1:2010/AMD2:2016
- IEC 60335-2-40:2018
- IEC 61000-3-2:2018
- IEC 61000-3-3:2013
- IEC 61000-3-3:2013/AMD:2017
- EN 55014-1:2017
- CISPR 14-1:2016
- EN 55014-2:2015
- CISPR 14-2:2015

Manufacturer and name of the authorised representative of the technical documentation:

Trotec GmbH

Grebberer Straße 7, D-52525 Heinsberg

Phone: +49 2452 962-400

E-mail: info@trotec.de

Place and date of issue:

Heinsberg, 05/03/2020

Detlef von der Lieck, Managing Director

Trotec GmbH

Grebbener Str. 7
D-52525 Heinsberg

☎ +49 2452 962-400

☎ +49 2452 962-200

info@trotec.com

www.trotec.com