

Baltojo triukšmo prietaisas Herupa WN23

Modelis: Herupa WN23

Pavadinimas: baltojo triukšmo prietaisas

Medžiaga: ABS plastikas

Nominali įtampa: 5V --

Garsiakalbio specifikacija: 52mm, 4Ω5W

Gaminio grynas svoris: 470 g

Akumuliatoriaus talpa: 3,7 V 2000 mAh

Prietaiso dydis: 194 * 89,5 * 74,5 mm

Pakuotėje rasite:

*1 baltojo triukšmo prietaisas,

*1 C tipo maitinimo kabelis,

*1 naudojimo instrukcija,

*1 atitikties sertifikatas

Nominali galia 3W


Nominali srovė 2A





Pagaminta Kinijoje

Parametrai

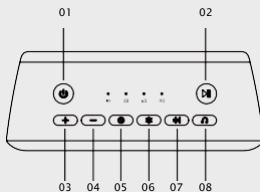

01 Ilgas paspaudimas įjungia / išjungia prietaisą

02 Pauzė / grojimas

03 Garso didinimas

04 Garso mažinimas

05 30/60/90 minučių laikmačio nustatymas

06 Trumpai paspaudus įjungiama šviesa / ilgai 3 sek. paspaudus išjungiama šviesa

07 Pasirinkimas tarp 10 baltojo triukšmo tipų

08 Vienos iš aštuonių muzikos melodijų pasirinkimas

 Maitinimo įjungimas / išjungimas

Ilgai įspaudus įjungimo/išjungimo mygtuką, prietaise įsijungia mėlynos spalvos apšvietimas. Taip pat, ilgas įjungimo/išjungimo mygtuko įspaudimas leidžia išjungti prietaisą. Įrenginio atmintis yra išsaugoma, todėl leis groti paskutinį pasirinktą garsą. Prietaiso viršuje esantis baterijos indikatorius šviečia mėlynai, kai jis veikia, o mirksėjimas su balso įspėjimu perspėja apie akumuliatoriaus išsikrovimą. Lempučių tampa raudona, kai akumuliatorius kraunamas, ir nuolat šviečia žaliai, kai jis visiškai įkrautas.

 Baltasis triukšmas

Baltojo triukšmo garsai (10 garsų). Baltojo triukšmo tonų perjungimui spustelėkite mygtuką .

- | | |
|------------------------------|--------------------------------|
| 1. Vėjo pūtimas | 6. Vaisiaus širdies monitorius |
| 2. Paukščių giesmė | 7. Krioklys |
| 3. Varlės ir svirpliai | 8. Vandens bangos |
| 4. Cikadų ir svirplių naktis | 9. Vėjas ir sniegas, |
| 5. Upės tekėjimas | raštinis namelis, ugnis |
| | 10. Griaustinis |

 Muzikinės melodijos

Toliau pateiktų muzikinių melodijų perjungimui spustelėkite mygtukus.

- | | |
|---------------------------------------|---------------------|
| 1. Muzikinė dėžutė | 5. Tyloji arfa |
| 2. Vėjo varpeliai | 6. Jūra ir žuvedros |
| 3. Pianinas | 7. Gitara |
| 4. Vandens lašas ir sekundinė rodyklė | 8. Arfa |

 Mini naktinis žibintas

Šviesos įjungimui / išjungimui ilgai įspauskite šviesos mygtuką . Mini naktinis žibintas turi 9 rūšių šviesas: mėlyna, raudona, žalia, violetinė, šviesiai mėlyna, geltona, balta, šiltai žalia, šiltai geltona. Spalvų perjungimui trumpai spustelėkite šviesos apšvietimo mygtuką .

Mygtuko aprašymas

 Pauzė / atkūrimas

Trumpam pristabdymui paspauskite pauzės  mygtuką. Paleidimui trumpai paspauskite muzikos arba pauzės mygtuką.

**Garso valdymas**

Garsui valdyti skirtas  mygtukas. Galima didinti arba mažinti garsumą.

**Laikmačio nustatymas**

Spustelėkite laikmačio  mygtuką ir nustatykite 30/60/90 minučių laikmatį. Praėjus pasirinktam laikui, prietaisas automatiškai išsijungs.

Mygtuko aprašymas

1. Prieš prijungdami prietaisą prie maitinimo šaltinio patikrinkite ar ant maitinimo adapterio nurodyta įtampa atitinka vietinę maitinimo įtampą.
2. Nejunkite įrenginio prie adapterio, kurio įtampa ir galia viršija ant šio gaminio nurodytą įtampą ir galią.
3. Naudojimo metu pastebėjus sutrikimų, nustokite jį naudoti ir nedelsdami išjunkite maitinimą.
4. Užtikrinkite, kad gaminys nebūtų veikiamas vandens ir nebūtų naudojamas drėgnoje aplinkoje (pvz., vonios kambariuose, baseinuose ir pan.).
5. Nemėtykite ir netrankykite gaminio, nes tai gali jį sugadinti.
6. Rekomenduojamas šio gaminio aplinkos temperatūros intervalas yra 10–50 °C.
7. Įrenginio nenaudojant ilgesnį laiką išjunkite maitinimą.
8. Prašome nelaikyti baterijų (akumuliatorių blokų ar jų darinių) saulės spinduliuose, šalia šilumos šaltinių ar panašioje pernelyg karštoje vietoje.

Saugos instrukcijos


Dėkojame, kad įsigijote šį gaminį.

Šiam gaminiui suteikiama 24 mėnesių garantija nuo įsigijimo datos.

WN23

Please carefully consult the instructions before using this product

Herupa WN23 White Noise		Name
Model No: WN23 Name: White noise Material: ABS plastic Rated power: 3W Rated voltage: 5V  Rated current: 2A Speaker specification: 52mm, 4Ω 5W Product net weight: 470g Battery capacity: 3.7V 2000mAh Product Size: 194*89.5*74.5mm Packing list: Fanyin white noise*1, power cable Type-C*1, Instruction manual*1, Certificate of Conformity*1 Quality control: qualified product Production area: China. Shenzhen		Parameters
   		

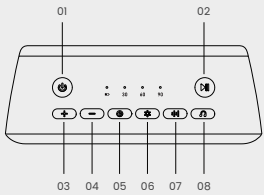

01 02

03 04 05 06 07 08

01 Long press to power on/off 02 Pause/play

03 Volume up 04 Volume down

05 Set timer for 30/60/90 minutes

06 Short press to switch the light on/long press for 3 seconds to switch it off

07 Select among 10 types of white noise

08 Select one from eight music tunes

 **Power on/off**

Long press to switch on lights up blue. The device's memory will play the last selected sound, long press to switch off the device while it is in operation. The battery indicator lights up blue when it is in operation and flashes blue with a voice alert when the battery is low; the light turns red when the battery is charging and turns in green constantly when it is fully charged.

 **White noise**

White noise sounds (10 sounds) Click the button to switch between white noise tones.

1) Wind blowing 2) Birdsong 3) Frogs and crickets 4) Night of cicadas and crickets 5) River flow 6) Fetal heart monitor 7) Waterfall 8) Ocean waves 9) Wind and snow, log cabin, fire 10) Thunder

 **Musical tunes**

Click on the buttons to switch between the following musical tunes.

1) Music box 2) Wind chimes 3) Piano 4) Water drop and second hand 5) Quiet harp 6) Sea and seagulls 7) Guitar 8) Harp

 **Mini-nightlight**

Long press the light button to turn on/off the light, short press to switch 9 kinds of light (blue, red, green, purple, light blue, yellow, white, warm green, warm yellow), switch to green warm light (warm green) 9 colours are automatically switched in a cycle.

 Pause/playback Short press on the music button to pause; short press on the music button to play.  Volume control Volume up: Press the button to increase the volume Volume down: Press the button to reduce the volume.  Setting the timer Please click the timer button and set the timer to one of 30/60/90 minutes. The device will automatically shut down after the selected time and play continuously when switching to the power indicator.	Button Description
1.Please check that the voltage indicated on the power adapter matches the local supply voltage before plugging the product into a power source. 2.Please do not connect the machine with an adapter that exceeds the voltage and power indicated on this product. 3.In case of abnormalities during use, stop using it and turn off the power immediately. 4.Please ensure that the product does not be exposed to water and not used in wet environments (e.g. bathrooms, swimming pools, etc.) 5.Please do not throw or hit the product as this may cause damage to the product. 6.The recommended ambient temperature range for this product is 10–50°C. 7.Please turn off the power when not in use for a prolonged period of time. 8.Please do not expose the batteries (battery packs or combinations) to sunlight, fire or similar excessive heat.	Safety Instructions
Thank you for purchasing this product. This product is guaranteed for a period of 24 months from the date of purchase. Please ensure that this warranty card is carefully completed and kept for warranty purposes.	