
INSTALLATION GUIDE

SUN SERIES | Ceiling-mounted artificial skylight

Installation procedure based on the manufacturer's supplied diagrams.


01 Prepare the ceiling opening

Prepare the ceiling cutout to the specified dimensions. Place the luminaire face up, open the outer frame, and remove the wire hanger as shown.

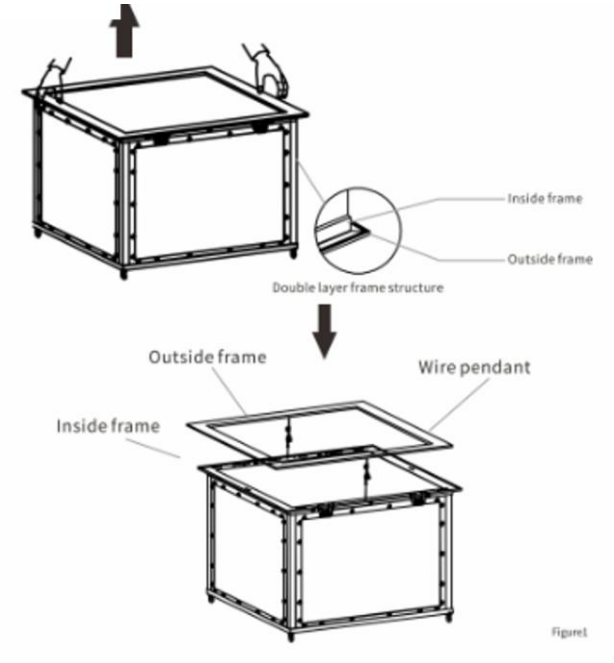


02 Assemble the face frame

With the luminaire face up, disconnect the suspension wire from face frame A. Connect the frame assembly as shown in Figure 2.

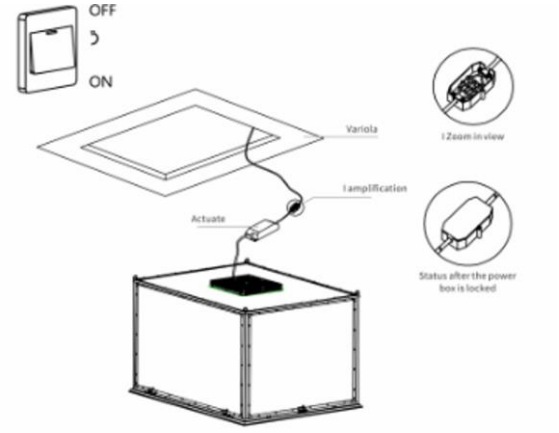

03 Secure the luminaire — mounting mechanism

Lift the luminaire into the prepared opening. Turn the slider screw clockwise until the sliding mechanism presses against the ceiling and the frame sits flush.

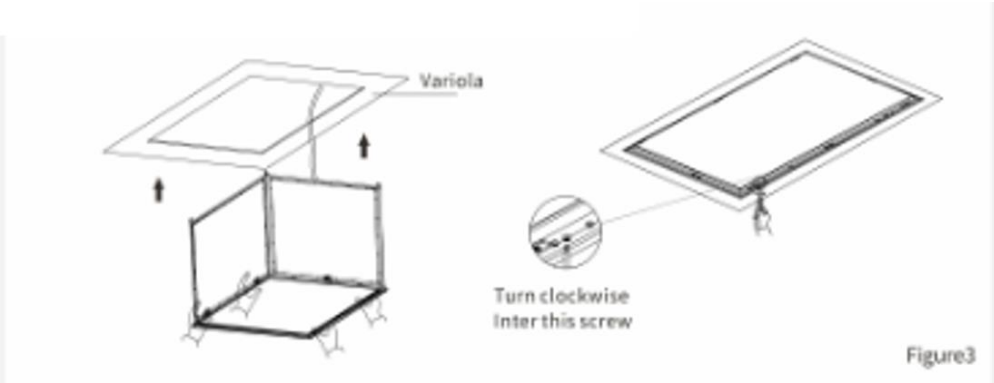


Slider mechanism: turn clockwise to extend and lock the slider; turn counterclockwise to retract it.



04 Alternative fixing method — steel suspension wire

Secure the suspension wire to the ceiling support and adjust its length until the frame sits flush against the ceiling.

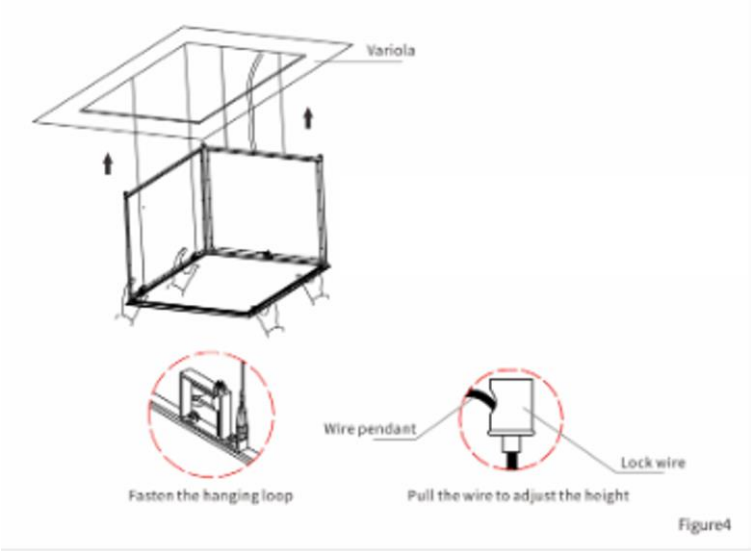

05 Install the finishing frame

Tie the suspension wires of panels A and B and fit the face frame. Check that the four corners align and that the frame is seated correctly.


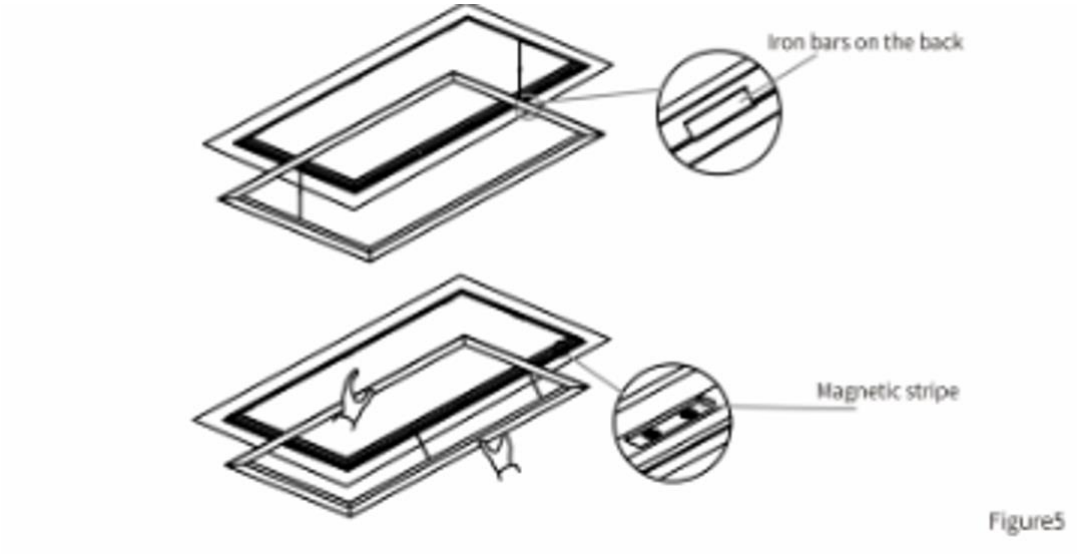


Figure5

06 Final check and power on

Check that the luminaire and frame are secure. Switch on the luminaire and verify operation.

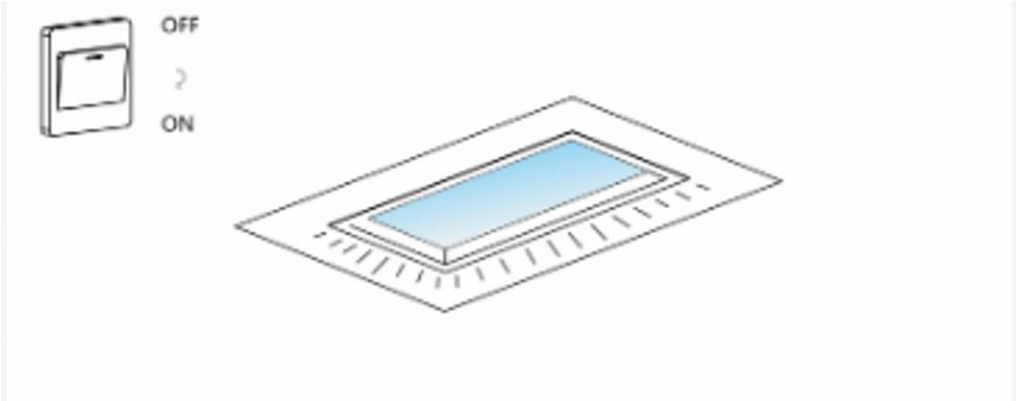

Note The manufacturer indicates that recessed and embedded installation follow the same procedure; surface installation uses a different method.